


Executive Order G-70-177

Exhibit 2

Figure 2E

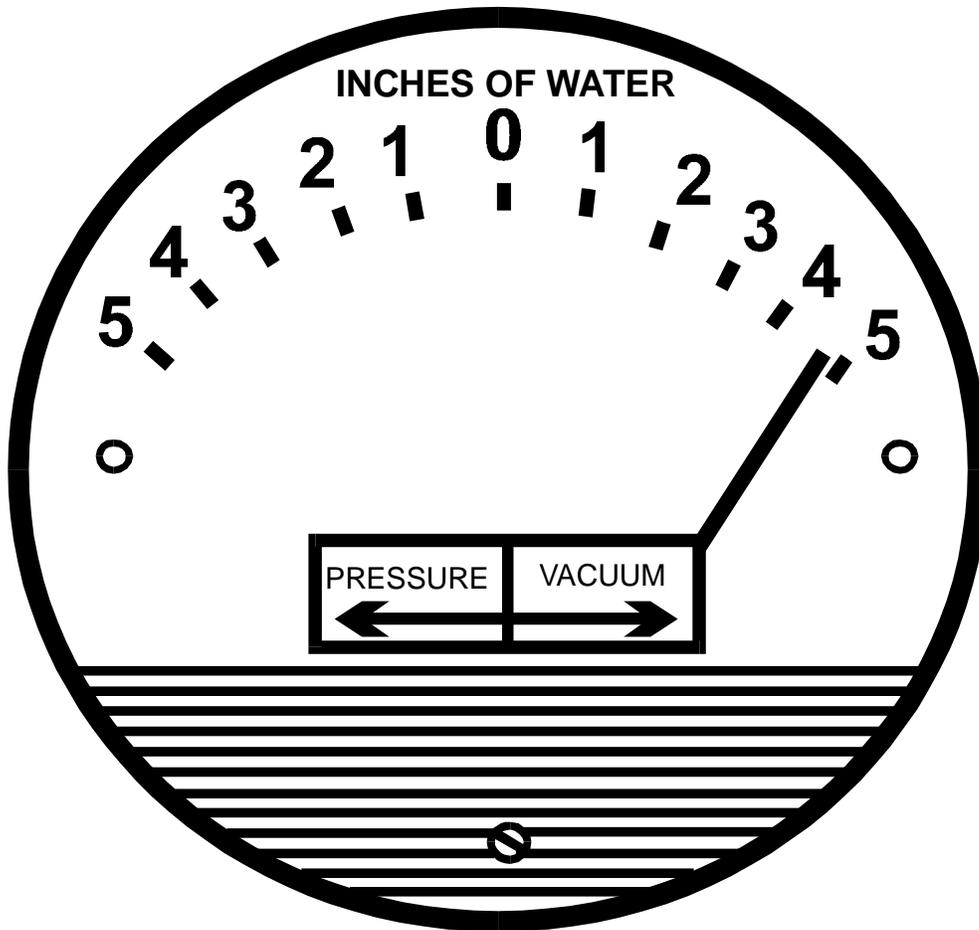

Note Pressure/Vacuum Gage is usually installed in the dispenser housing located furthest from the vent riser