

Executive Order VR-101-B

Exhibit 4

Static Torque of Rotatable Phase I Adaptors

Definitions common to all certification and test procedures are in:

D-200 Definitions for Vapor Recovery Procedures

For the purpose of this procedure, the term "CARB" refers to the California Air Resources Board, and the term "Executive Officer" refers to the CARB Executive Officer, or his or her authorized representative or designate.

1. PURPOSE AND APPLICABILITY

- 1.1 The purpose of this procedure is to quantify the amount of static torque required to start the rotation of a rotatable Phase I adaptor. This procedure determines compliance with the performance specification required by CARB.

2. PRINCIPLE AND SUMMARY OF TEST PROCEDURE

- 2.1 A compatible dust cap is installed on a rotatable Phase I adaptor. A Torque Test Tool is then installed on the dust cap and three static torque measurements are taken. If the resulting, average static torque is less than, or equal to, the maximum allowable static torque value specified in Certification Procedure CP-201, the adaptor is verified to be in compliance.

3. BIASES AND INTERFERENCES

- 3.1 Missing or defective gaskets in the dust cap may bias the results towards compliance as a dust cap may slip on the rotatable adaptor prior to the adaptor rotating. This bias is eliminated by ensuring that the dust cap seal is securely in place and does not show signs of excessive wear or damage.
- 3.2 Gasoline or other lubricants on the sealing surface of the rotatable adaptor or the dust cap seal can cause the dust cap to slip and may bias the results towards compliance. This bias is eliminated by ensuring that the sealing surface of the rotatable adaptor and dust cap is clean, dry and free of lubricants.


4. SENSITIVITY, RANGE, AND PRECISION

- 4.1 The measurable static torque is dependent upon the range of the Torque Wrench used for the test. The recommended Torque Wrench range specified in Section 5.1 provides sufficient precision at the maximum allowable static torque.

5. EQUIPMENT


- 5.1** Torque Wrench. Use a Snap-On TER12FUA Torque Wrench, or equivalent to measure the static torque of the rotatable adaptor. The torque wrench used to conduct static torque testing shall be capable of the following.
- 5.1.1** The maximum full-scale range of the Torque Wrench shall be 144 pounds-inches (12 pound-feet) with minimum accuracy of 3.0 percent.
 - 5.1.2** The minimum readability of the Torque Wrench shall be 5.00 pound-inch increments to ensure accurate readings.
 - 5.1.3** The torque wrench shall incorporate a mechanism, such as a tell-tale needle, that identifies the maximum applied torque during each measurement.
- 5.2** Static Torque Test Assembly. Use a compatible dust cap and rotatable adaptor Torque Test Tool, Phil-Tite® Part Number 6004 or equivalent. A depiction of the Phil-Tite® Torque Test Tool is shown in Figure 1. An example of a complete Static Torque Test Assembly is shown in Figure 2.
- 5.3** Socket wrench and socket extension. Use a 3/8 inch or 1/2 inch socket wrench, adaptors and socket extension (if needed) to verify 360-degree rotation or to conduct static torque testing. The socket extension shall not exceed 12 inches in length.

Figure 1
Phil-Tite® Torque Test Tool

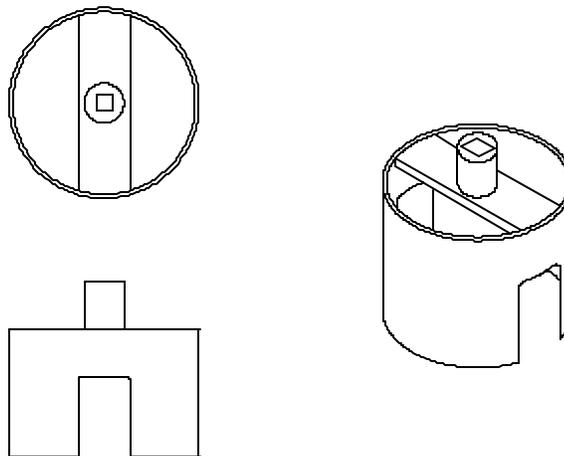

- 5.4** Traffic Cones. Use traffic cones to encircle the Phase I area while the test is being conducted.

Figure 2
Static Torque Test Assembly

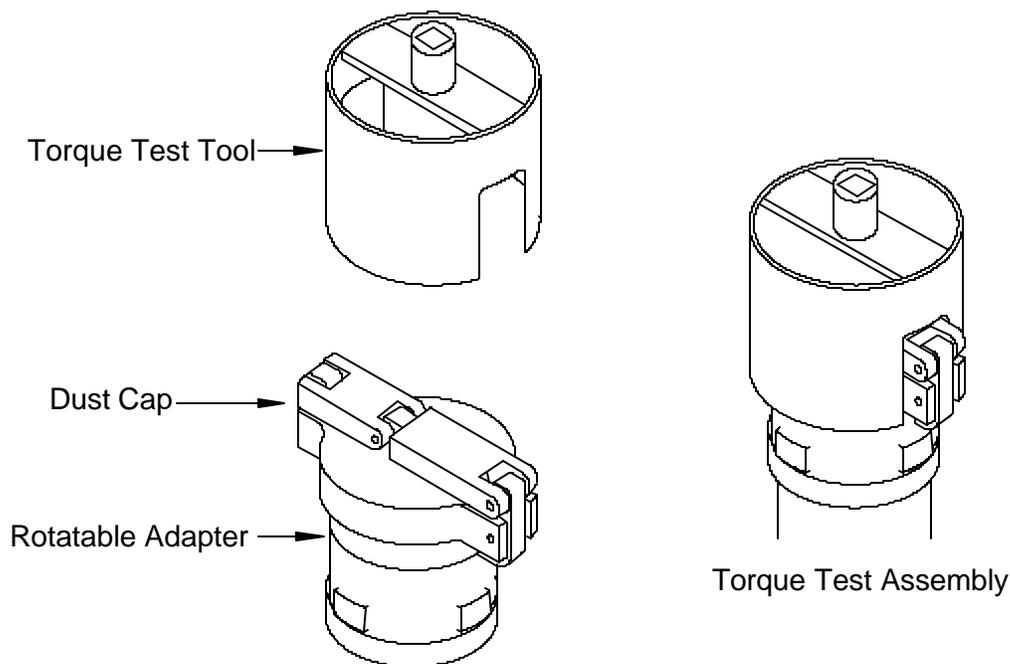

6. PRE-TEST PROCEDURES

- 6.1 Place the traffic cones around the perimeter of the Phase I spill containers, allowing sufficient space to safely conduct the test.
- 6.2 Remove the lids of the Phase I spill containers. Visually determine that the adaptors are of the rotatable design.
- 6.3 Inspect the dust caps to ensure that the caps and that the gaskets are intact and do not show signs of excessive wear or damage.
- 6.4 Inspect the rotatable adaptors. If the adaptors are wet or covered with a lubricant, wipe the adaptors clean to ensure maximum friction between the dust cap and the adaptor seal surface.

7. TEST PROCEDURE

- 7.1** Install the dust cap on the Phase I rotatable adaptor.
- 7.2** Install the Torque Test Tool on the dust cap as shown in Figure 2.
- 7.3** Verification of rotation, conducted prior to the static torque test. Place a socket wrench with socket extension (if required) into the Torque Test Tool, or equivalent. Rotate the adaptor a minimum of 360 degrees. Note: do not continue with static torque measurements if the adaptor does not rotate 360 degrees.
- 7.4** Install the Torque Wrench into the Torque Test Tool. If the spill container is too deep to allow connection of the Torque Wrench, use a compatible socket extension to reach into the bucket to the Torque Test Tool. The socket extension shall not exceed 12 inches in length.
- 7.5** Place one hand on top of the Torque Wrench, directly above the center of the Torque Test Tool to keep the wrench level when applying pressure. Gently apply an even, steady pressure just until the adaptor begins to rotate. Record the maximum static torque value as shown on the torque wrench and proceed to 7.6 and 7.7.
- 7.6** After the first static torque measurement is taken, slowly rotate the adaptor one third of full rotation (120 degrees) from the point of the first measurement location. Using the same technique as specified in 7.5, measure and record a second static torque.
- 7.7** Following the first and second measurements, slowly rotate the adaptor a second, one third of full rotation (120 degrees) from the second measurement location. Using the same technique as specified in 7.5, measure and record a third static torque. Rotating the adaptor in one-third increments ensures that the average static torque is representative of the entire adaptor rotation.

8. POST-TEST PROCEDURES

- 8.1** Remove the Torque Test Assembly and replace the appropriate lids on each of the spill containers.
- 8.2** Remove the traffic cones from the Phase I area.

9. CALCULATING RESULTS

- 9.1** Calculate the arithmetic average of the three tests for each adapter tested and record on a data sheet.

10. REPORTING RESULTS

10.1 Report the results of the quantification of the leakrate through the Drop Tube/Drain Valve Assembly as shown on Form 1. Districts may require the use of alternate Drop Tube/Drain Valve Assembly data sheets provided they include the same parameters identified on Form 1.

11. ALTERNATE PROCEDURES

11.1 This procedure shall be conducted as specified. Modifications to this test procedure shall not be used to determine compliance unless prior written approval has been obtained from the CARB Executive Officer, pursuant to Section 14 of Certification Procedure CP-201.

Form 1
Static Torque of Rotatable Phase I Adaptors

Test Company:	Conducted By:
Test Date:	Facility Name:
Facility Address:	City:

Measurement Units: pound-inches

Vapor Adaptor 1			Vapor Adaptor 2			Vapor Adaptor 3			Vapor Adaptor 4		
360° Test	PASS	FAIL									
Brand:			Brand:			Brand:			Brand:		
Model:			Model:			Model:			Model:		
Grade:			Grade:			Grade:			Grade:		
Torque 1:			Torque 1:			Torque 1:			Torque 1:		
Torque 2:			Torque 2:			Torque 2:			Torque 2:		
Torque 3:			Torque 3:			Torque 3:			Torque 3:		
Average:			Average:			Average:			Average:		

Product Adaptor 1			Product Adaptor 2			Product Adaptor 3			Product Adaptor 4		
360° Test	PASS	FAIL									
Brand:			Brand:			Brand:			Brand:		
Model:			Model:			Model:			Model:		
Grade:			Grade:			Grade:			Grade:		
Torque 1:			Torque 1:			Torque 1:			Torque 1:		
Torque 2:			Torque 2:			Torque 2:			Torque 2:		
Torque 3:			Torque 3:			Torque 3:			Torque 3:		
Average:			Average:			Average:			Average:		

Comments: _____