



Healy 1302 Flow Limiter

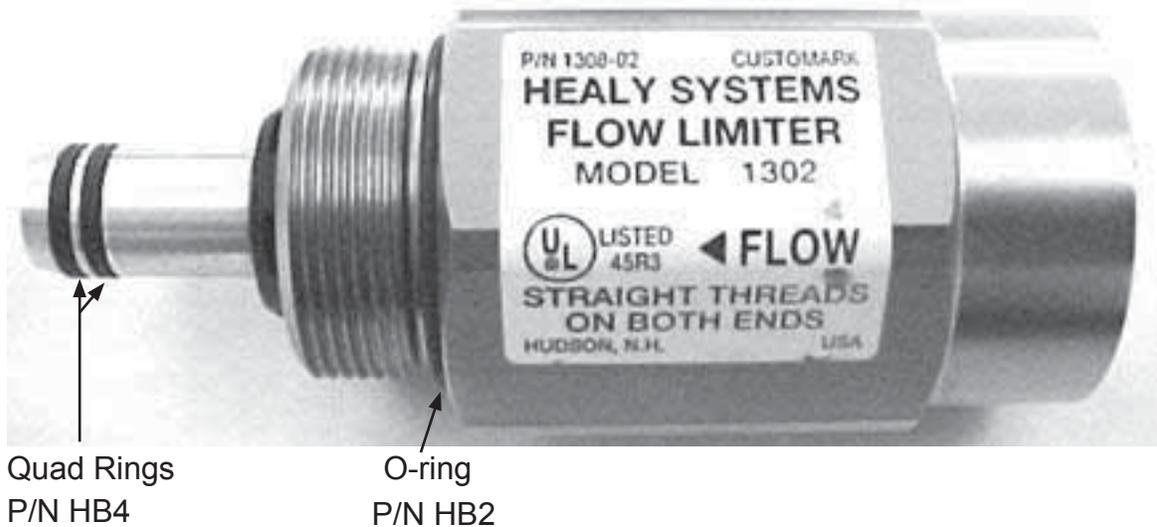

The Healy Model 1302 Flow Limiter is designed for installation into the female end of the Healy P/N 807 swivel breakaway before installation of a Healy Systems primary hose. The flow limiter reduces the product dispenser rate to conform to the U.S. EPA 10.0 gpm maximum dispensing limit.

Installation Instructions: Lubricate the quad rings and O-ring before assembly with oil or grease. **Do not use pipe sealant or tape on threads or seals.** Install the male end of the flow limiter into the swivel breakaway as shown below and tighten to 60 ft-lbs. Install the primary hose and nozzle according to their instructions. Make sure all fittings are tight, test for any leaks and check to be sure the flow does not exceed 10.0 gpm with the nozzle fully open (lever held all the way up).

Field replaceable parts are limited to replacement of the Quad Rings or O-ring. There is no maintenance required of the internal parts.

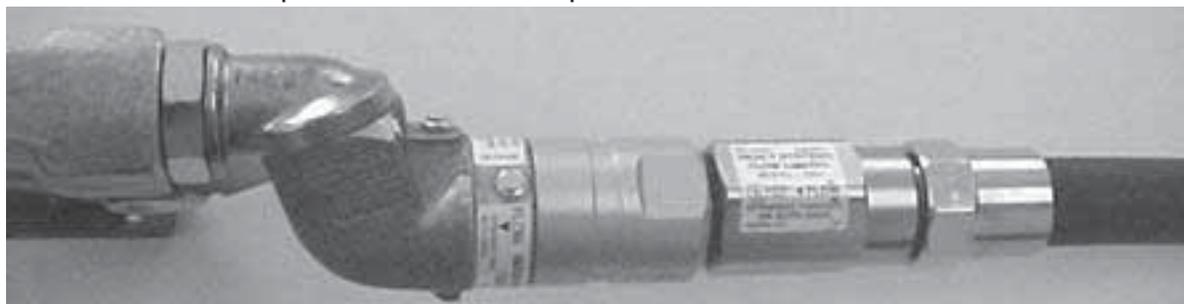

Nozzle	807 Swivel Breakaway	Flow Limiter	Primary Hose
--------	----------------------	--------------	--------------

Healy Systems, Inc.
 18 Hampshire Drive
 Hudson, New Hampshire 03051 USA
 ARB Approved Installation, Operation and Maintenance Manual

Website: <http://www.healysystems.com>
 Email: sales@healysystems.com
 Telephone: 603.882.2472
 Fax: 603.882.5189



Healy Systems, Inc. – the innovative leader of Stage II vapor recovery equipment