


**Executive Order G-70-187  
Exhibit 2  
Figure 4A**

**TYPICAL ABOVEGROUND TANK  
INSTALLATION WITH A 100 JET PUMP  
(SELF-CONTAINED PUMP)**

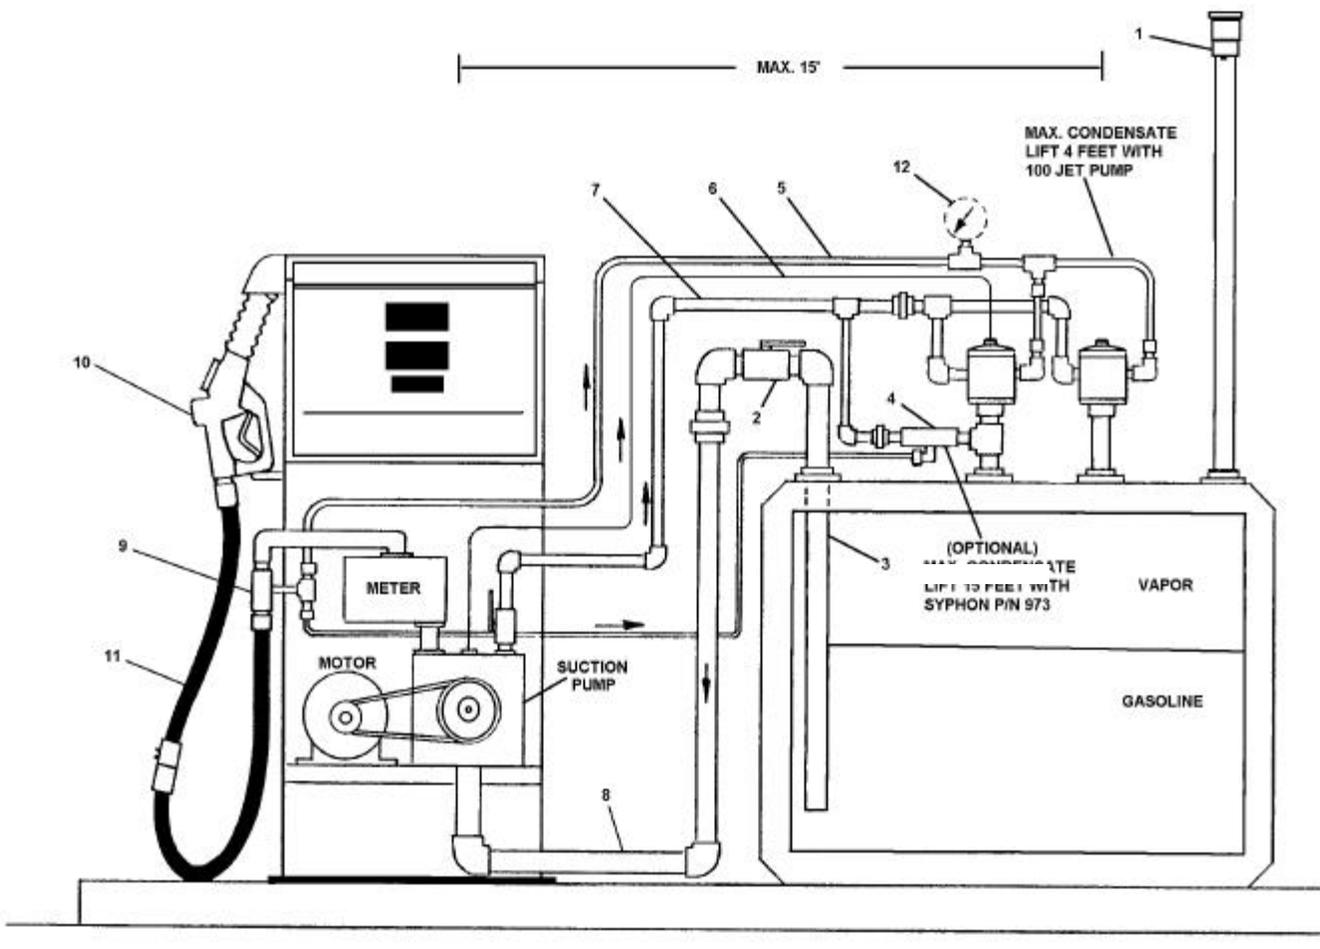

- |  |   |
|--|---|
| <ul style="list-style-type: none"> <li>1. +3" wc, - 8" wc P/V Vent Valve, Healy Part # HPVV</li> <li>2. 1½" Ball Valve</li> <li>3. 1½" Suction Riser</li> <li>4. #973 Siphon Valve Assembly</li> <li>5. ½" Vapor Return Line</li> <li>6. ¼" Air Eliminator Bleed Line</li> </ul> | <ul style="list-style-type: none"> <li>7. ½" Product Supply Line</li> <li>8. 2" Product Line</li> <li>9. Vapor Adapter, Healy Part # CX6-VV1A</li> <li>10. Nozzle, Healy # 400 ORVR</li> <li>11. Coaxial Hose Assembly, Healy Series #75B with Hose Clamp &amp; Breakaway</li> <li>12. 0" - 100" wc Vacuum Gauge</li> </ul> |
|--|---|

**NOTE:** This Illustration is for a single hose installation. Two 100 Jet Pumps are required for each hose.