


Executive Order G-70-186
Exhibit 2
Figure 2A

9000-01 MINI-JET INSTALLATION WITH RED JACKET PUMP

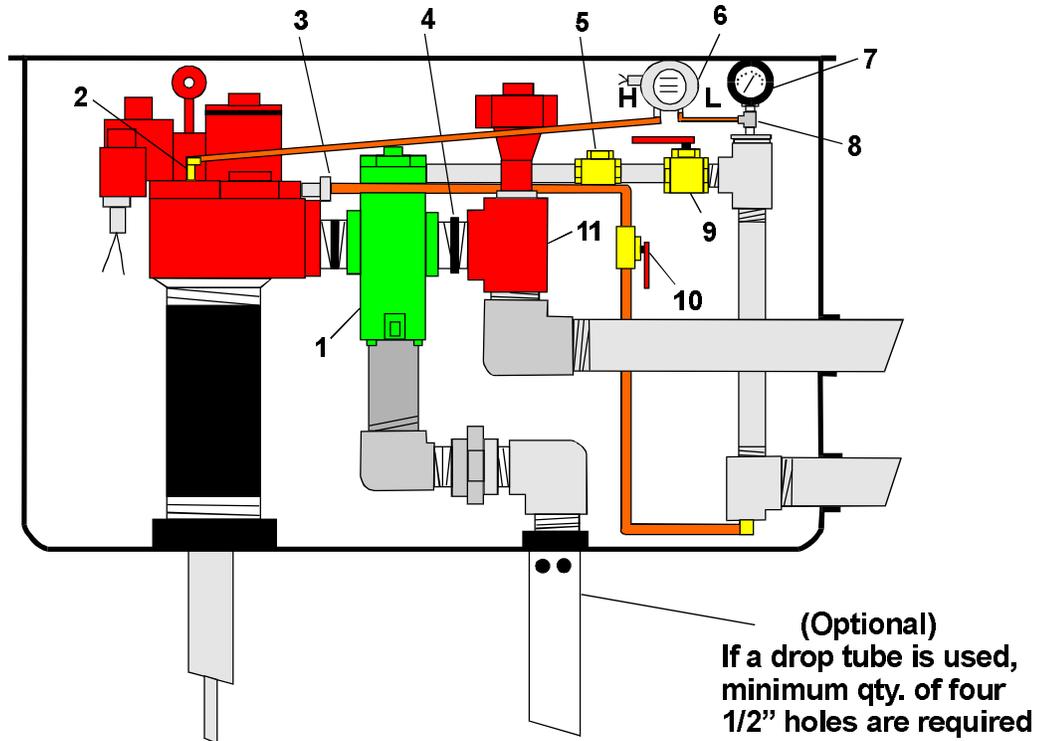

Below is a list of required items in a typical 9000-01 Mini-Jet sump installation.

1. 9000-01 Mini-Jet, Healy Systems Central Vacuum Source
2. 1/4" Tank Test Port, Red Jacket
3. Syphon Valve, Red Jacket
4. Universal Check Valve #212BPR (or equivalent)
5. Condensate Drain Check Valve #9466, Healy Systems
6. Pressure Switch #93928, Healy Systems
7. W.C. Vacuum Gage, 0" to 100" (FOR TESTING ONLY)
8. 1/4" TEE for vacuum gage test port
9. 1" Ball Valve, U L listed
10. 1/4" Ball Valve, U L listed
11. Leak Detector TEE Housing, Red Jacket