

Chemical & Bioassay Analyses of Emissions from Biodiesel Fuel Combustion

R. Kobayashi, X. Liu, C. Vogel, F. Matsumura, N. Kado

Dept. Environmental Toxicology

University of California, Davis

T. Cahill – Arizona State University

California Air Resources Board

Sacramento, CA.

Research Objectives

- Study biodiesel and renewable diesel emissions:
 - Chemical characterization of toxics
 - Toxicity studies of emissions

Unregulated Toxic Emissions

- PAHs
- Alkyl PAHs
- Nitro-PAHs
- Selective reactive aldehydes


Toxicity Studies of Emissions

- Tests for markers of inflammation in human cells
- Tests for genotoxicity
 - Mutagenicity
 - Chromosomal Damage


Test Vehicles

Vehicle/Engine	Engine Displacement (L)	Control Devices	Test Cycle	Fuels Tested
2000 Freightliner C15 Caterpillar	15	-	UDDS	CARB Diesel, Soy, Animal, and Renewable @ 20%, 50% and 100%
2008 Freightliner Mercedes Benz MBE 4000	12.8	DOC, DPF, EGR	UDDS	CARB Diesel, Soy, Animal, and Renewable @ 20%, 50% and 100%


Methods

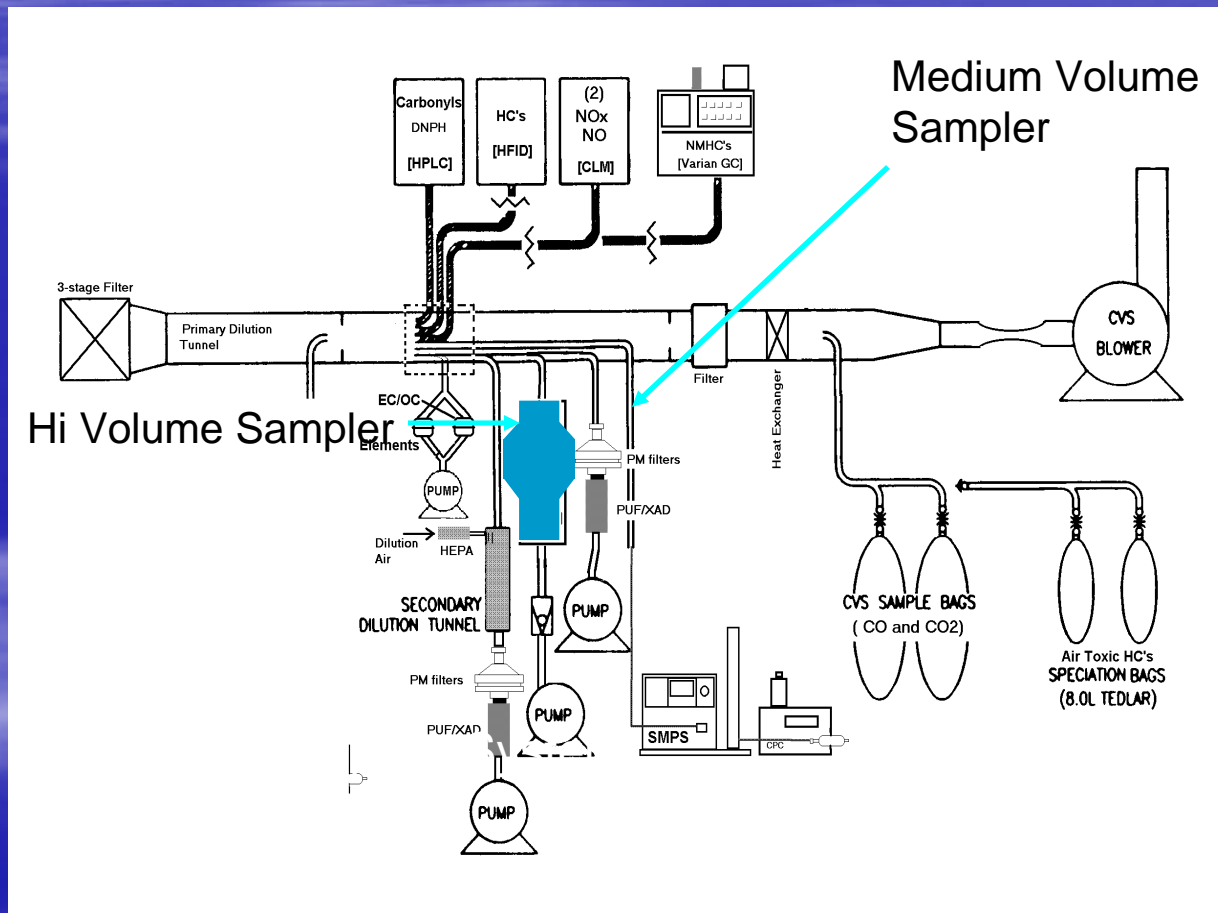

PM Filter Preparation for Analyses

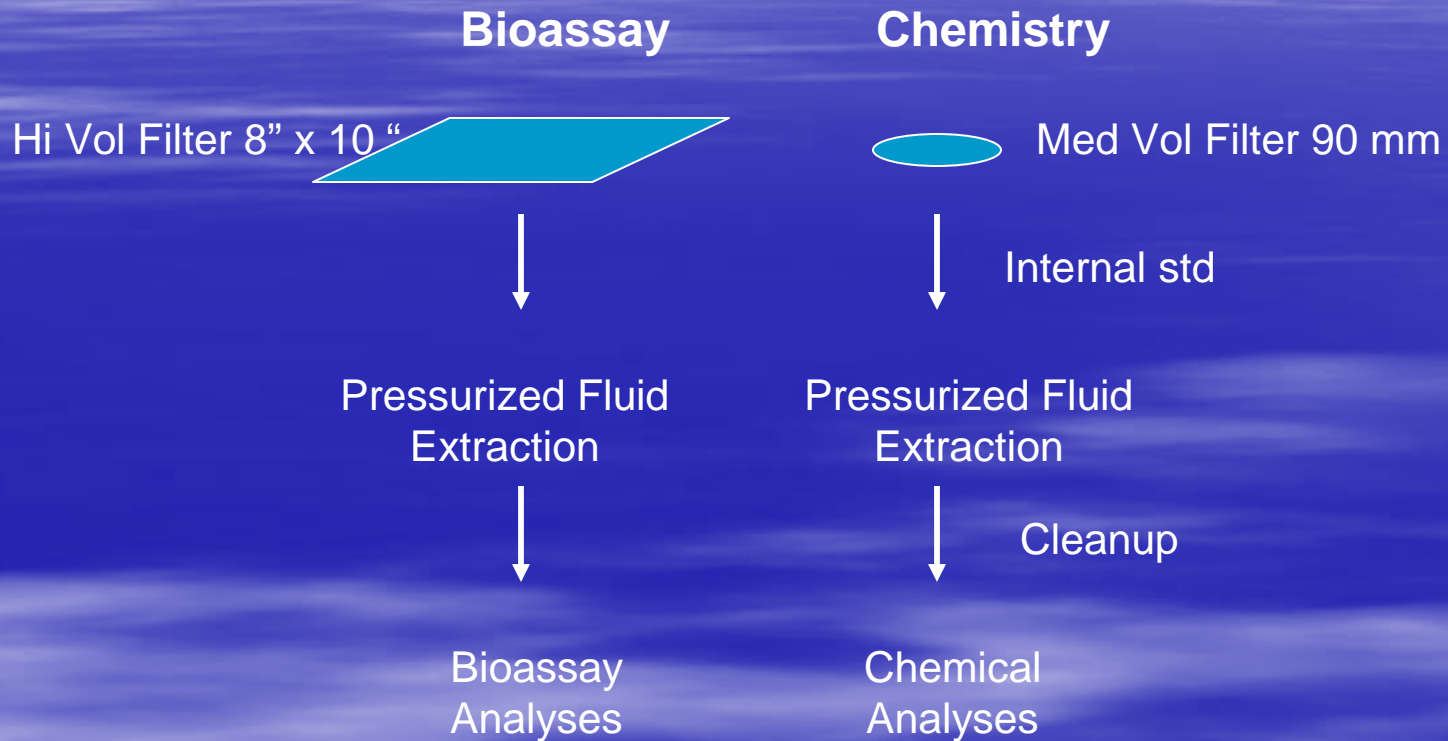

PUF XAD Preparation for Analyses

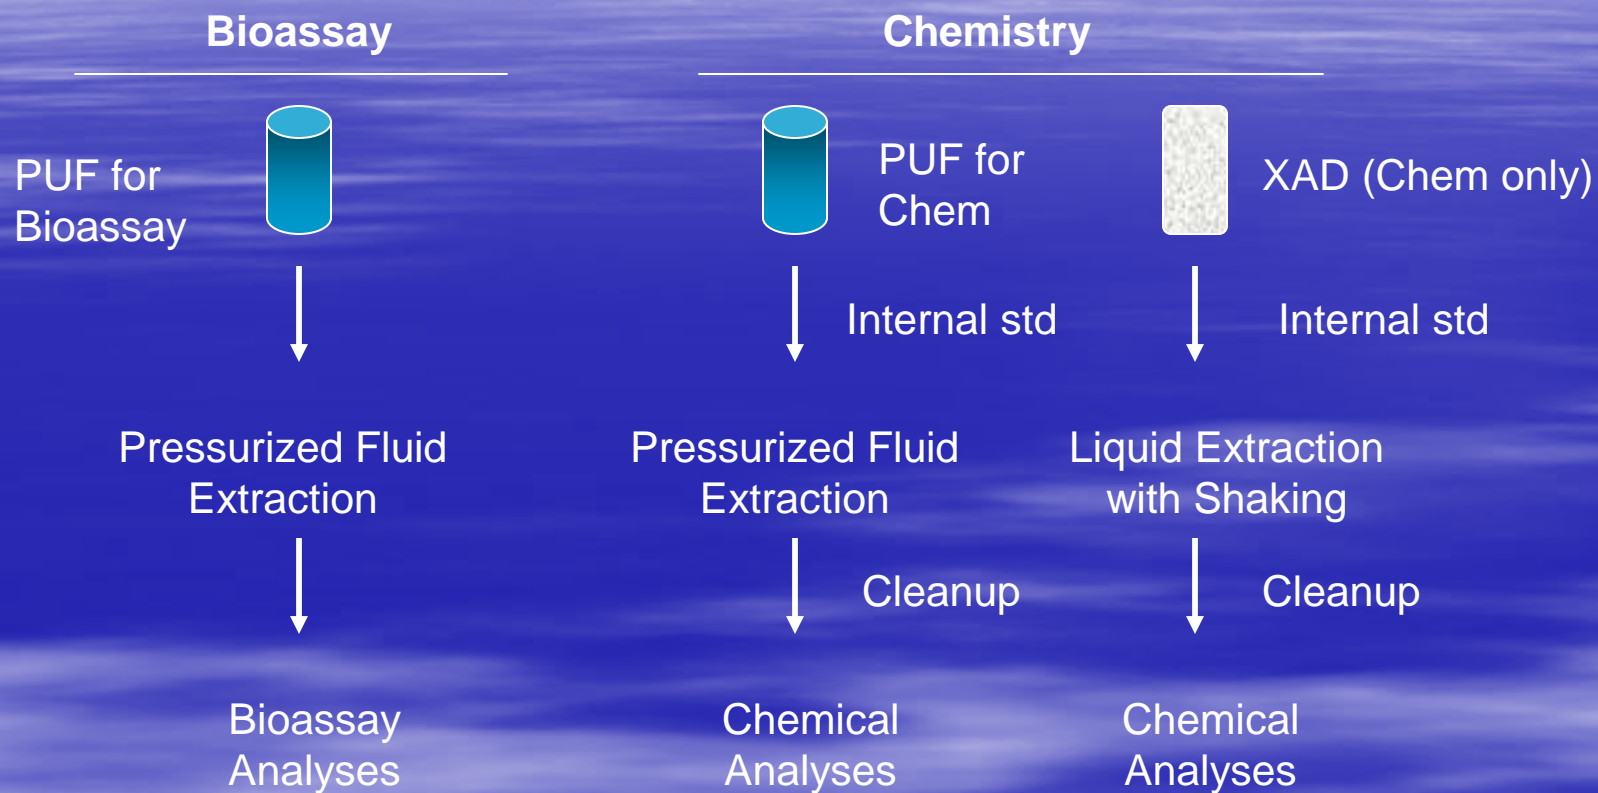

Methods

Chemical Analyses



Methods

Bioassay Analyses



```
graph TD; A[Bioassay Analyses] --> B[Genotoxicity]; A --> C[Human Cell Markers of Inflammation];
```

Genotoxicity

Human Cell Markers
of Inflammation

Chemical Analyses

- PAHs
- Alkyl PAHs
- Nitro-PAHs


Compounds Analyzed

<u>PAHs</u>	<u>Alkyl PAHs</u>	<u>Nitro-PAHs</u>
Naphthalene	2-Methylnaphthalene	1N-naphthalene
Acenaphthylene	1-Methylnaphthalene	2N-naphthalene
Acenaphthene	2,6-Dimethylnaphthalene coelute	5N-acenaphthene
Fluorene	1,6-Dimethylnaphthalene	2N-fluorene
Phenanthrene	2,3,5-Trimethylnaphthalene coelute	9N-anthracene
Anthracene	3-Methylphenanthrene	3N-phenanthrene
Fluoranthene	2-Methylphenanthrene	2N-phenanthrene
Pyrene	9-Methylphenanthrene	3N-fluoranthene
Benz(a)anthracene	1-Methylphenanthrene	1N-pyrene
Chrysene+triphenylene	2-Methylantracene	7N-BaA
Benzo(b+j+k)fluoranthenes coelute	2-Methylfluoranthenes	6N-chrysene
Benzo(e)pyrene	1-Methyl & 3-Methylfluoranthenes	6N-BaP+1N-BeP
Benzo(a)pyrene	4-Methylpyrene	
Perylene	1-Methylpyrene	
Indeno(1,2,3-cd)pyrene	7,12-Dimethylbenz(a)anthracene	
Dibenz(a,h)anthracene		
Benzo(g,h,i)perylene		
Dibenzo(a,l)pyrene		

PAH Emissions


PM Associated PAHs

C15 Vehicle

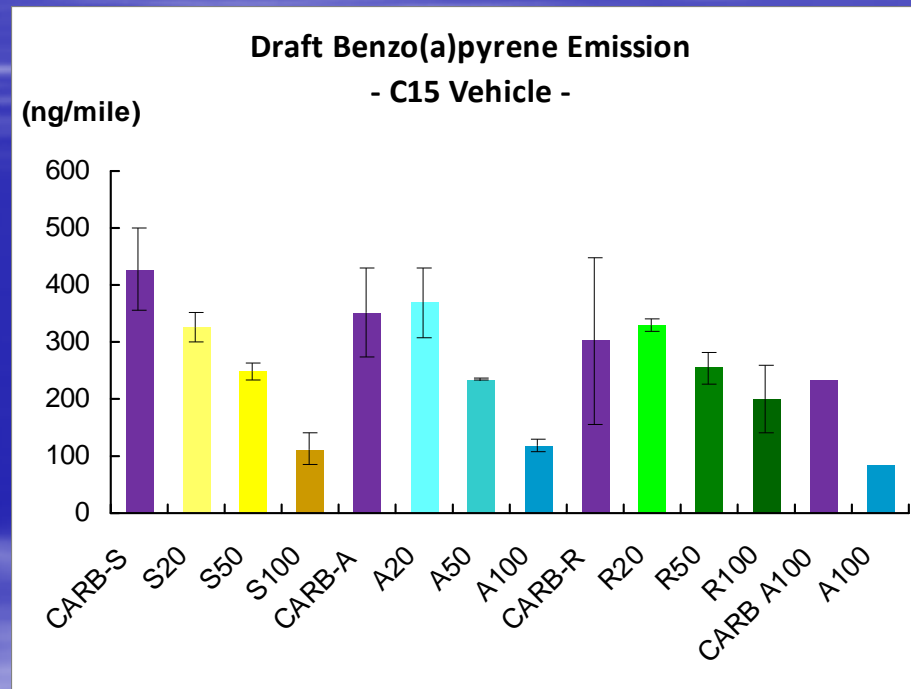


PAH Emissions

PM Associated PAHs

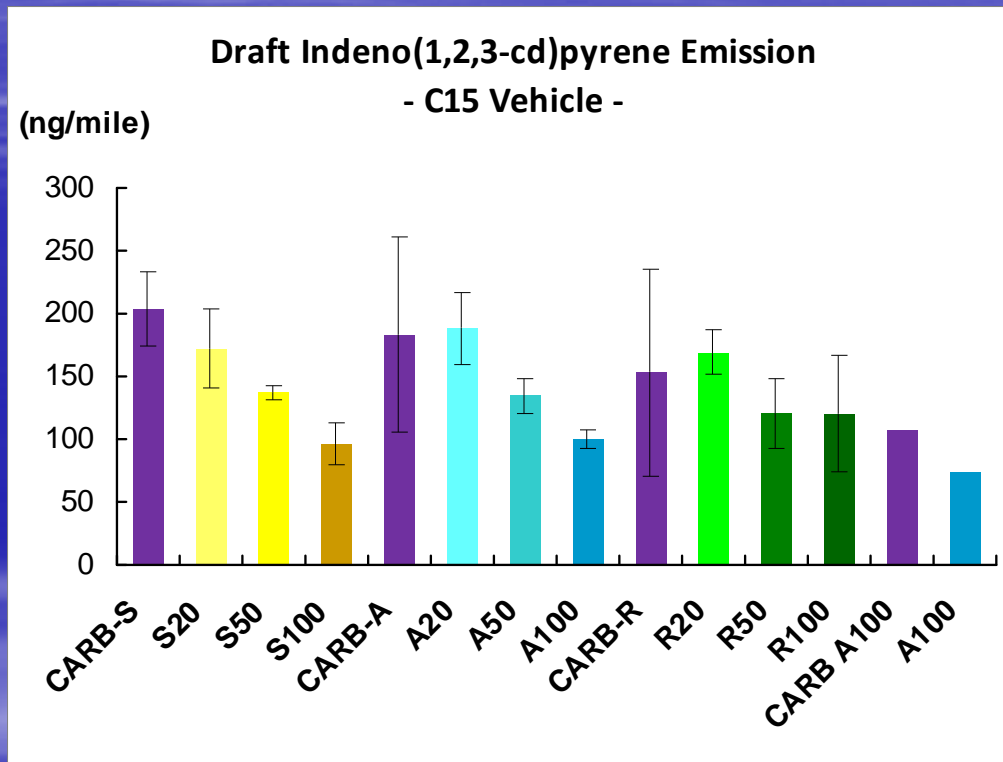


PAH Emissions

Vapor-Phase PAHs

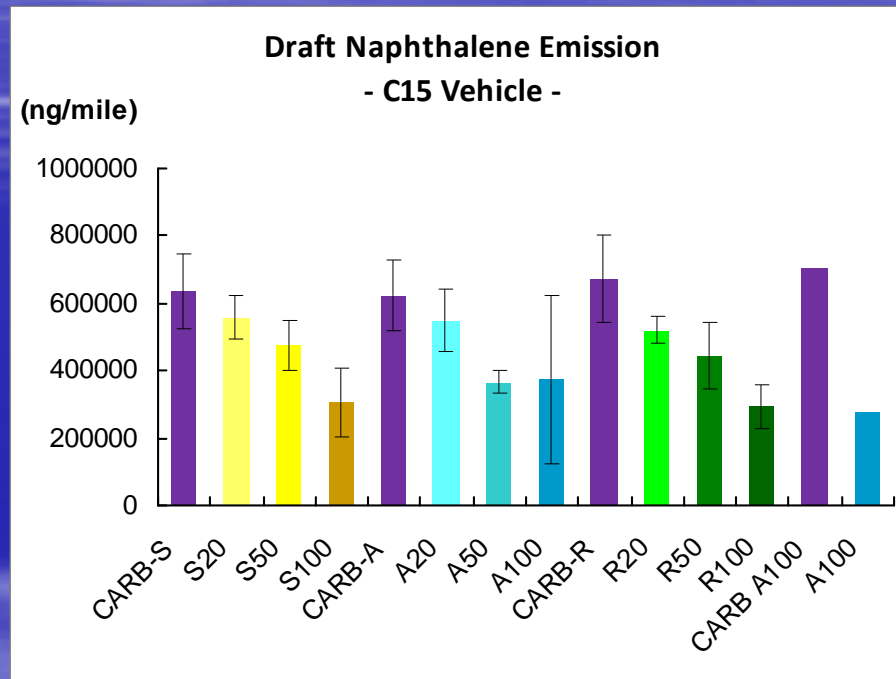

PAH Emissions


Vapor-Phase PAHs

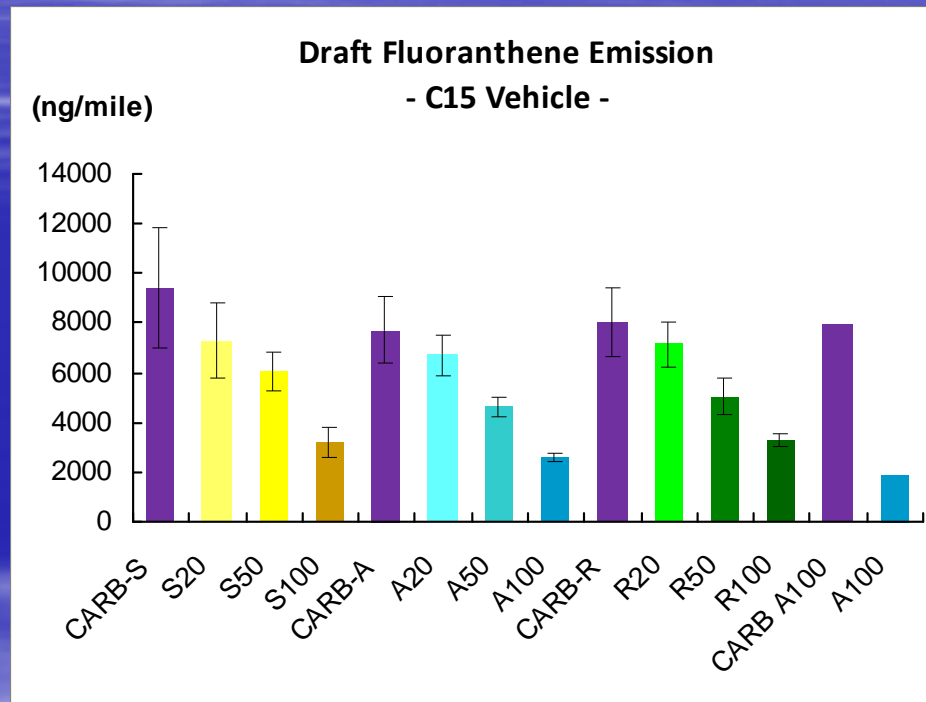

PAH Emissions

Nitro-PAHs


PM Associated

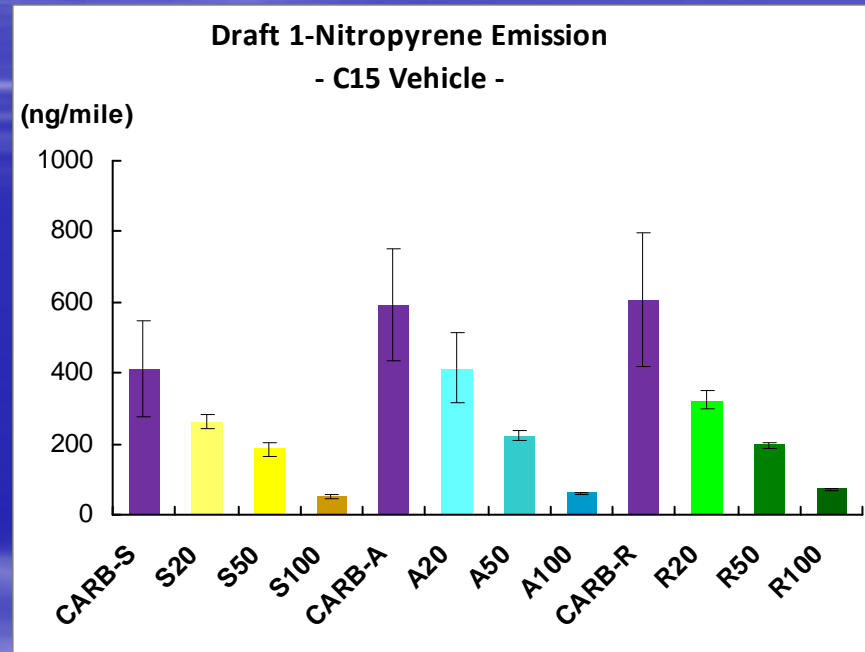

PAH Emissions


Nitro-PAHs

Vapor-Phase

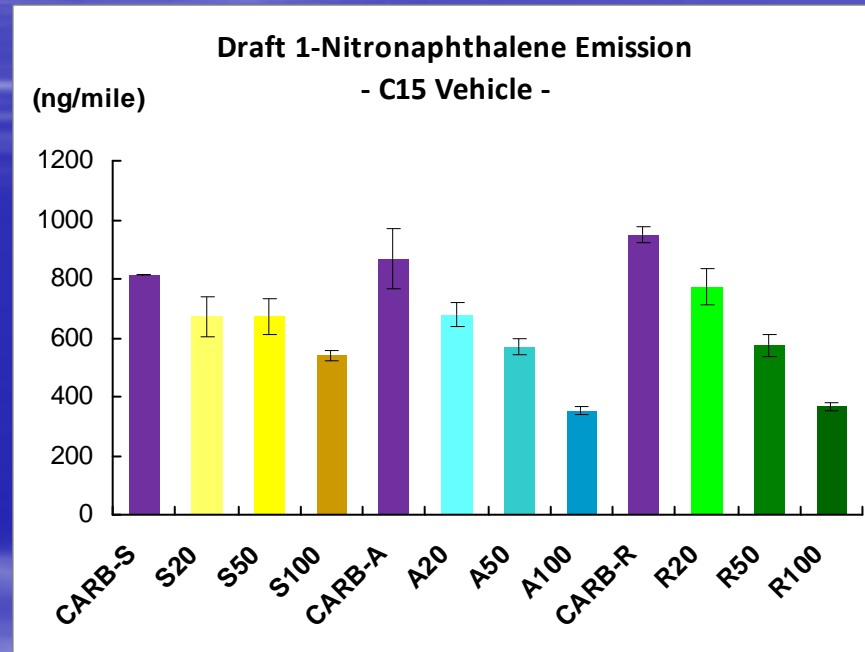

Summary PAHs C15 Vehicle


- PM and Semi-Volatile PAHs and Nitro-PAHs decreased with increasing blend level of biodiesels.

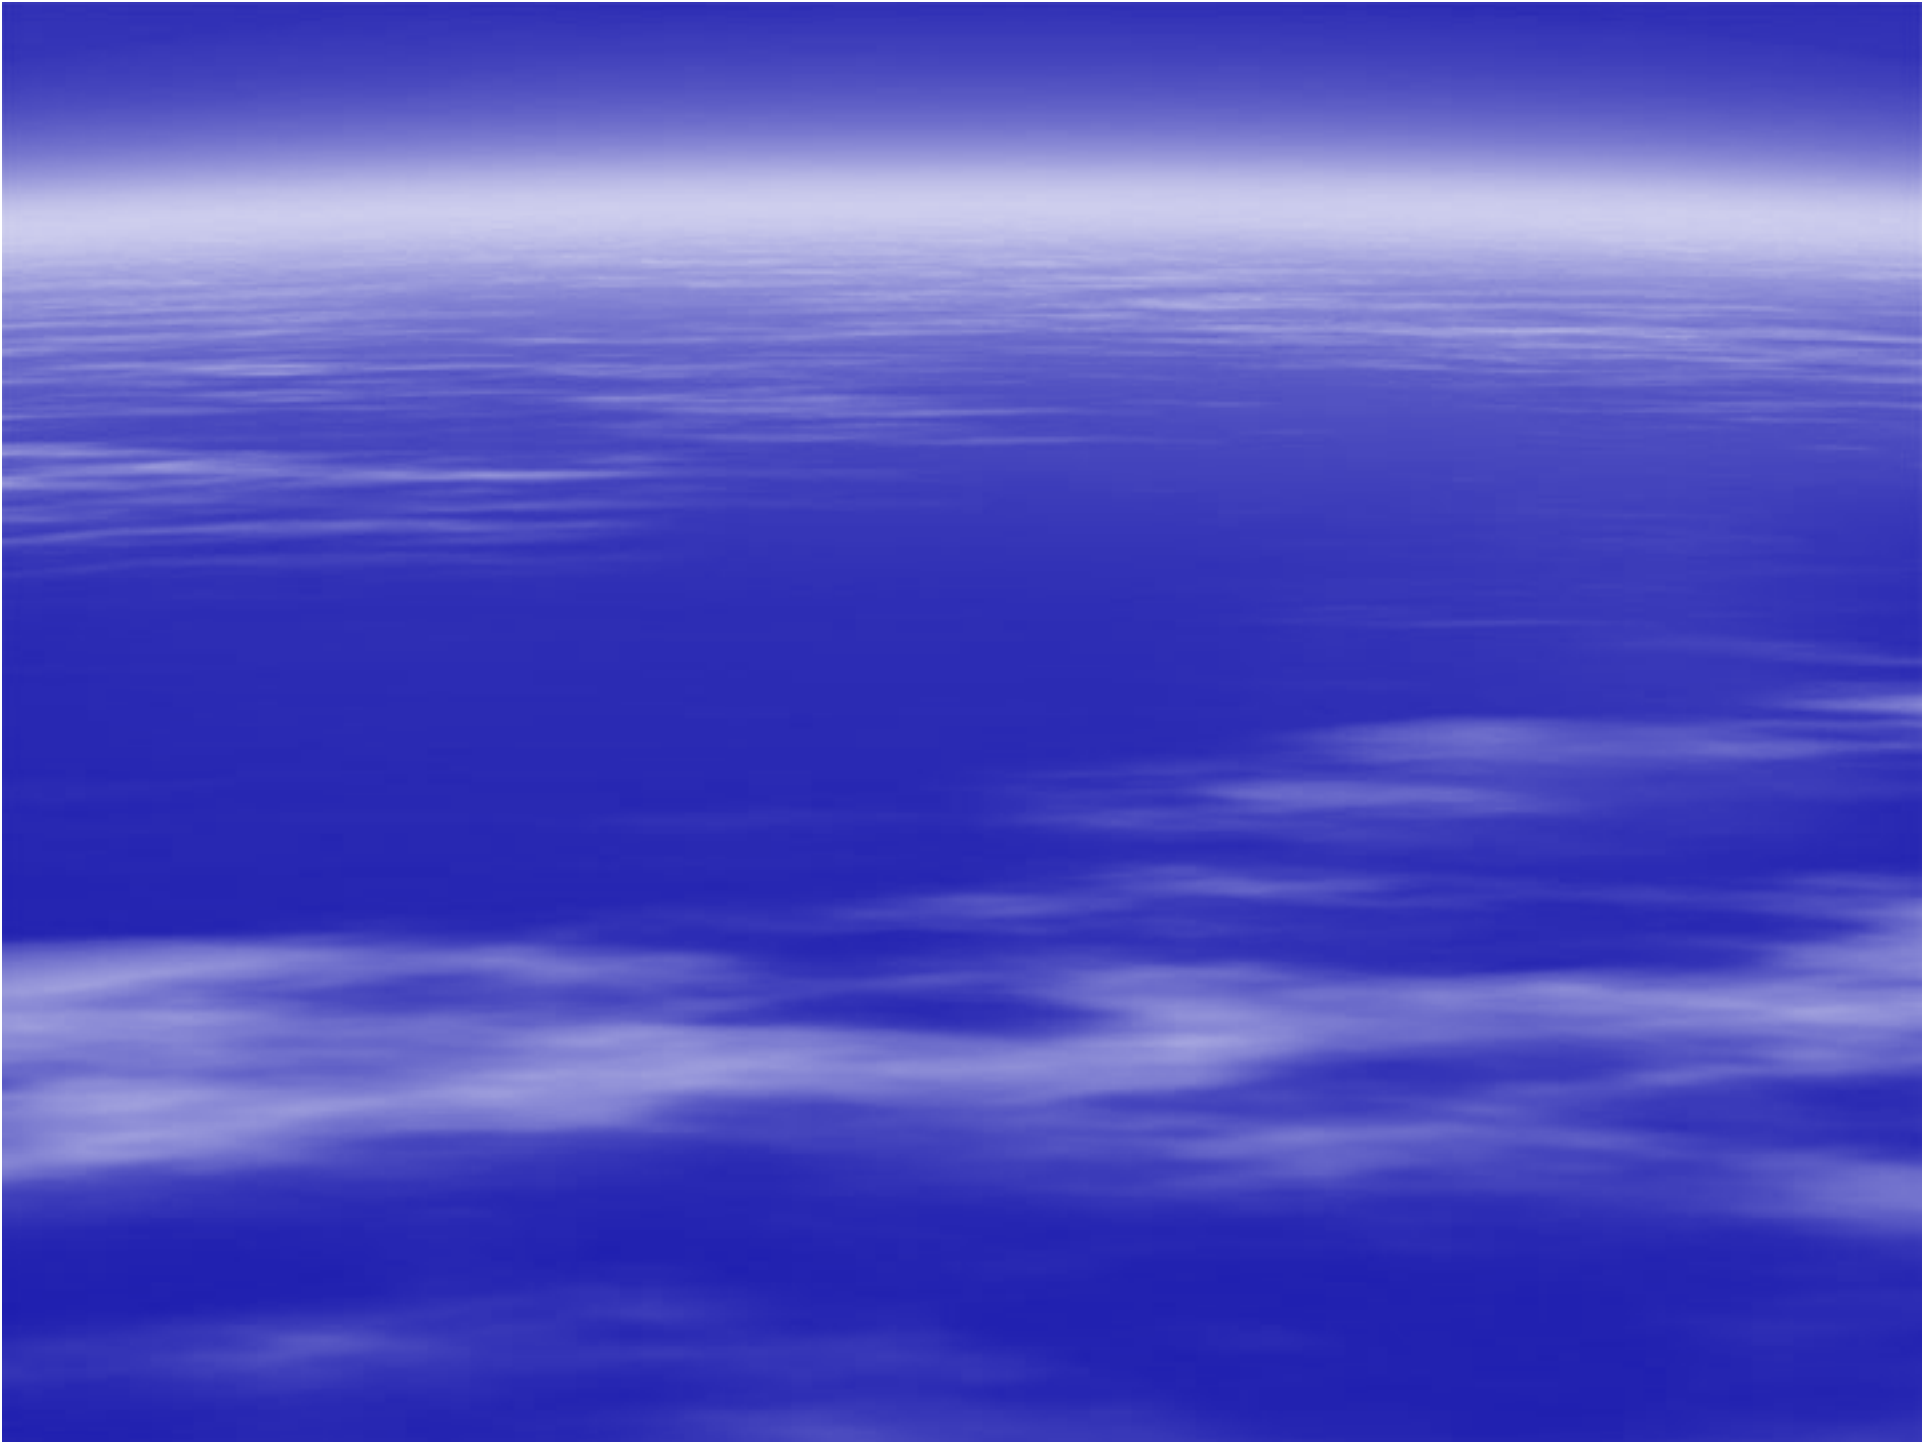

PAH Emissions

PM Associated PAHs


MBE 4000

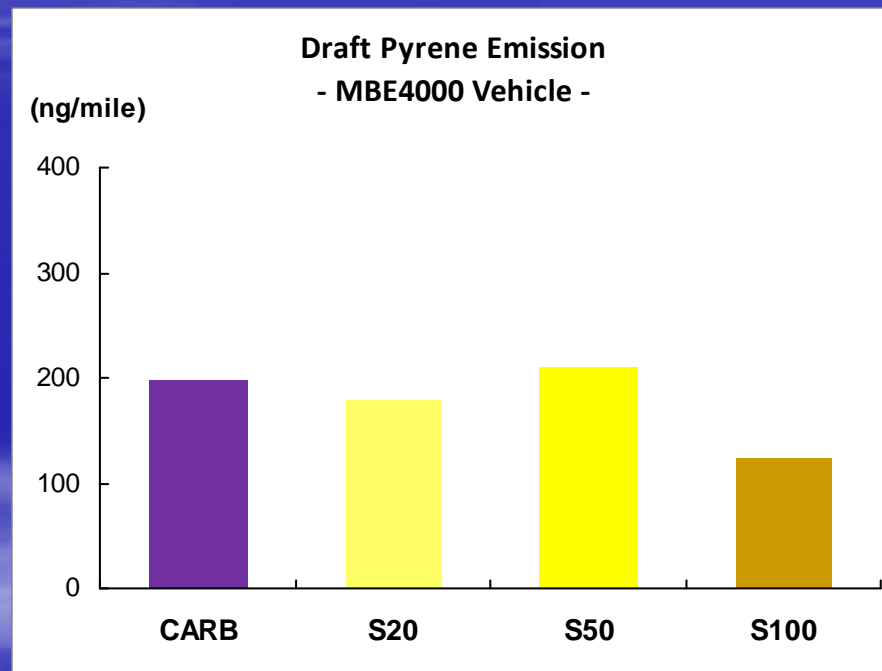

PAH Emissions

Vapor-Phase PAHs


MBE 4000

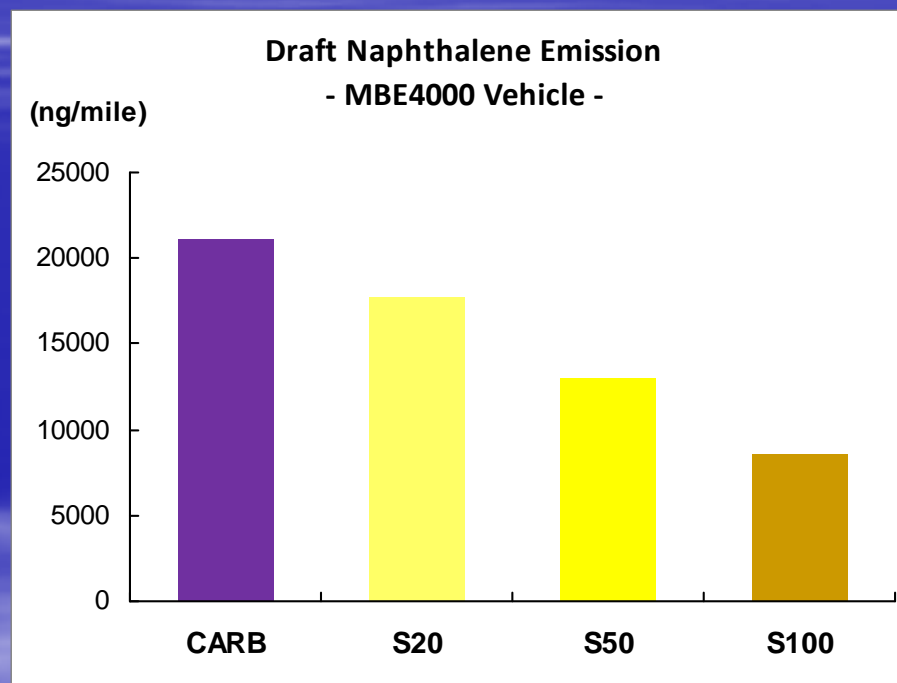

PAH Emissions

Vapor-Phase PAHs


MBE 4000

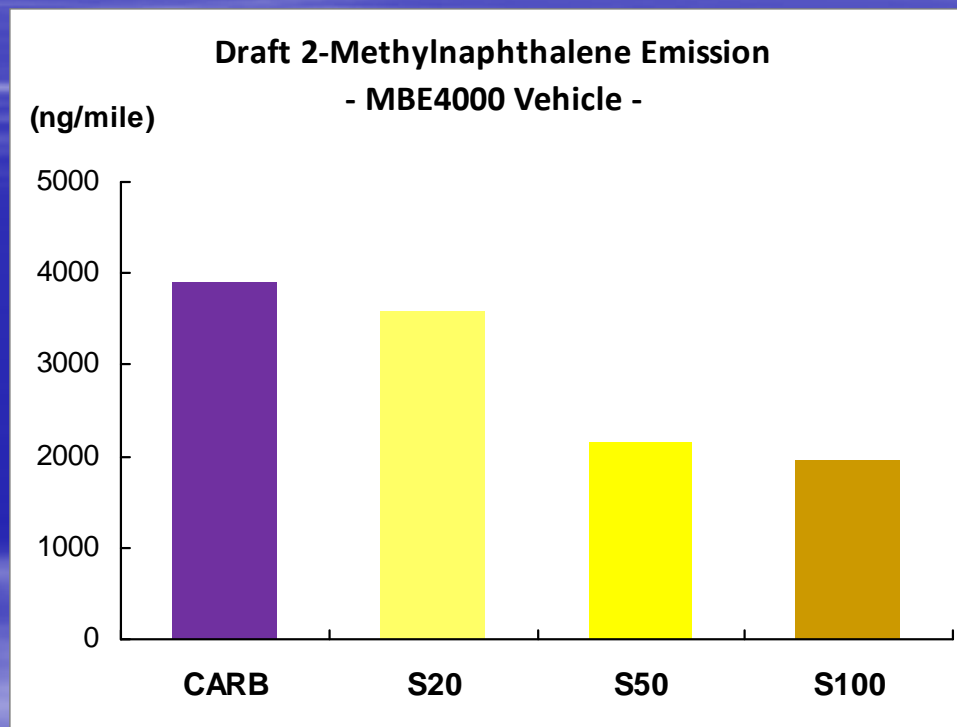

Draft PAH Emissions

Nitro-PAHs

MBE 4000

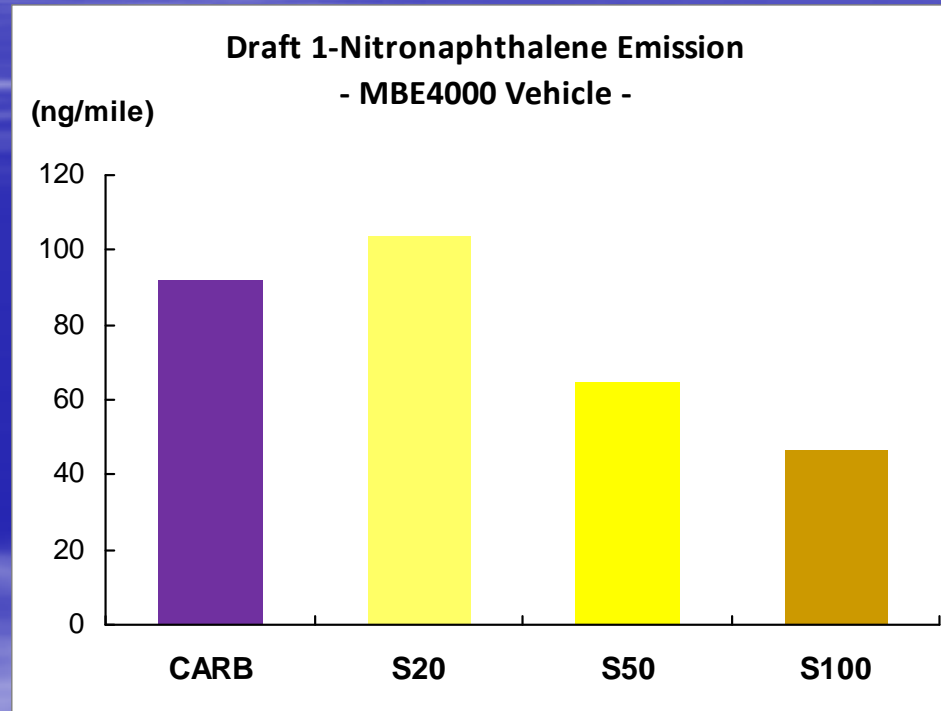

Summary PAHs MBE 4000 Vehicle

- Low Levels of PM associated PAHs and Nitro-PAHs in CARB and Biodiesel Fuel Emissions
- Lower levels of Vapor-phase PAHs and Nitro-PAHs emissions

Reactive Carbonyls

Reactive Carbonyl Sampling


- Sampling from Dilution Tunnel to Mist Chamber
- Samples in parallel to Filtered/Charcoal dilution air
- Samples for single UDDS test cycle

Reactive Carbonyl Analyses

- Stable carbonyls formed through reaction with bisulfite
- Carbonyls liberated from bisulfite
- Free carbonyls derivatized by o-(2,3,4,5,6-pentafluorobenzyl)hydroxylamine (PFBHA*)
- Derivatives detected & quantitated by GC/MS - NCI


Carbonyl Emissions

C15 Vehicle

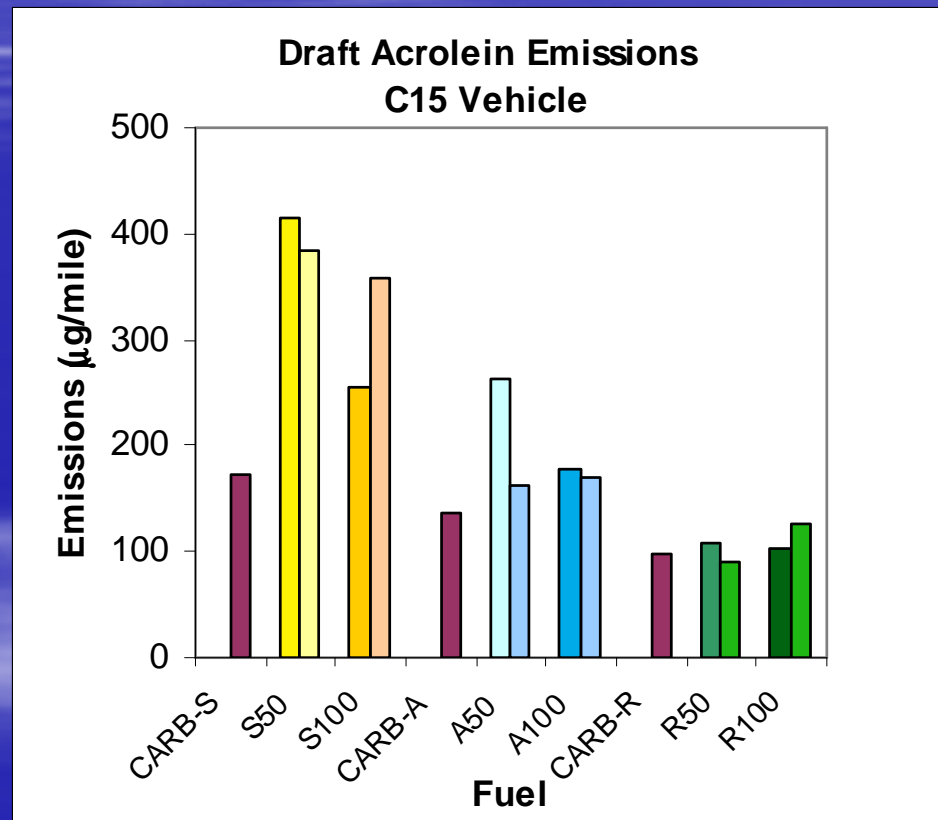


Carbonyl Emissions

C15 Vehicle

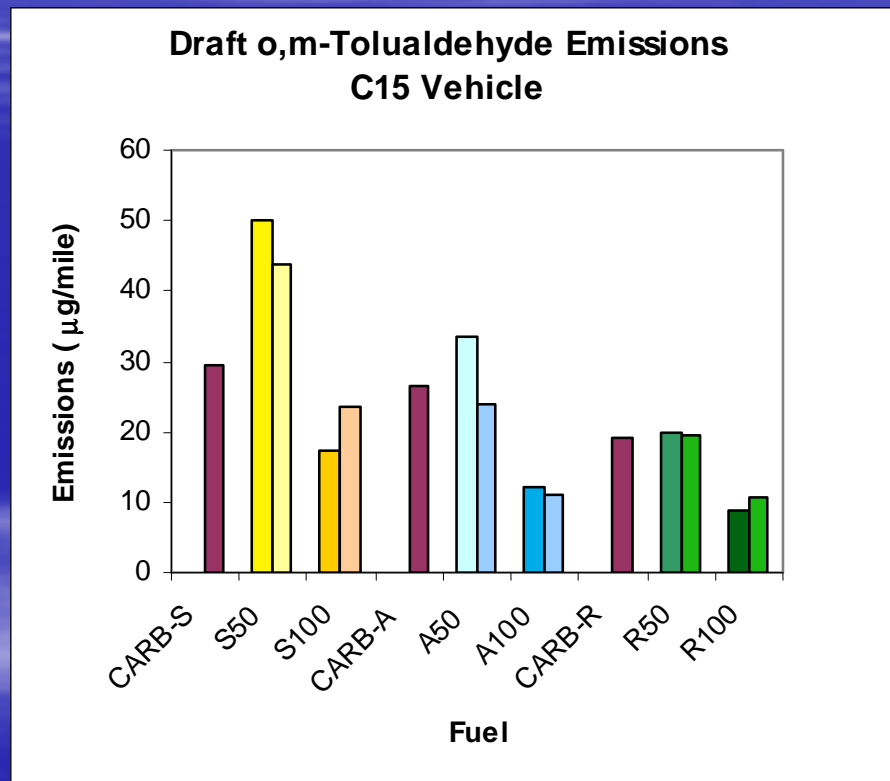

Carbonyl Emissions


MBE 4000 Vehicle

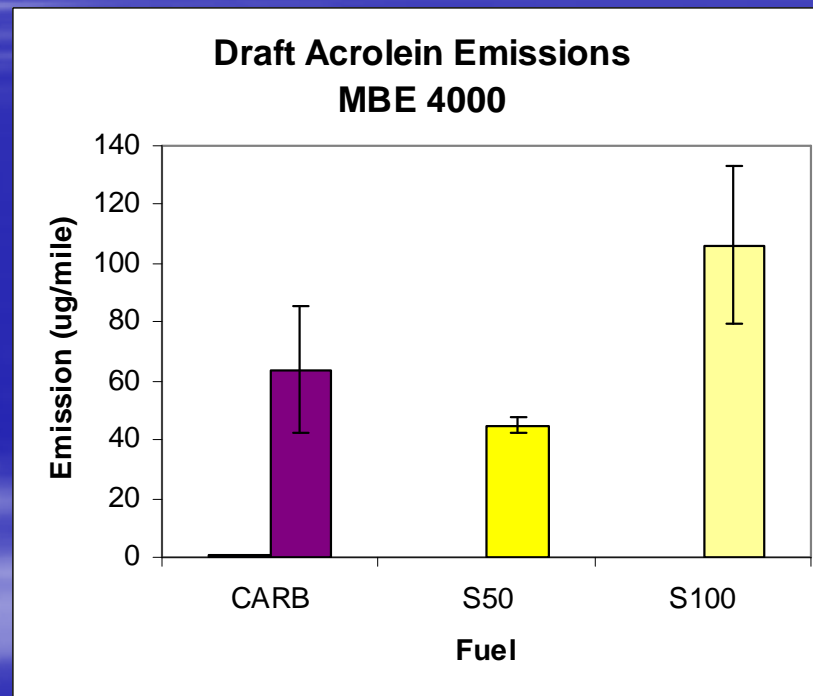

Summary

Reactive Carbonyls

- C15 Vehicle S50, S100 and A50, A100 were higher in certain carbonyls such as acrolein
- C15 Vehicle Renewable diesel no change over Carb
- MBE4000 Vehicle – carbonyls lower

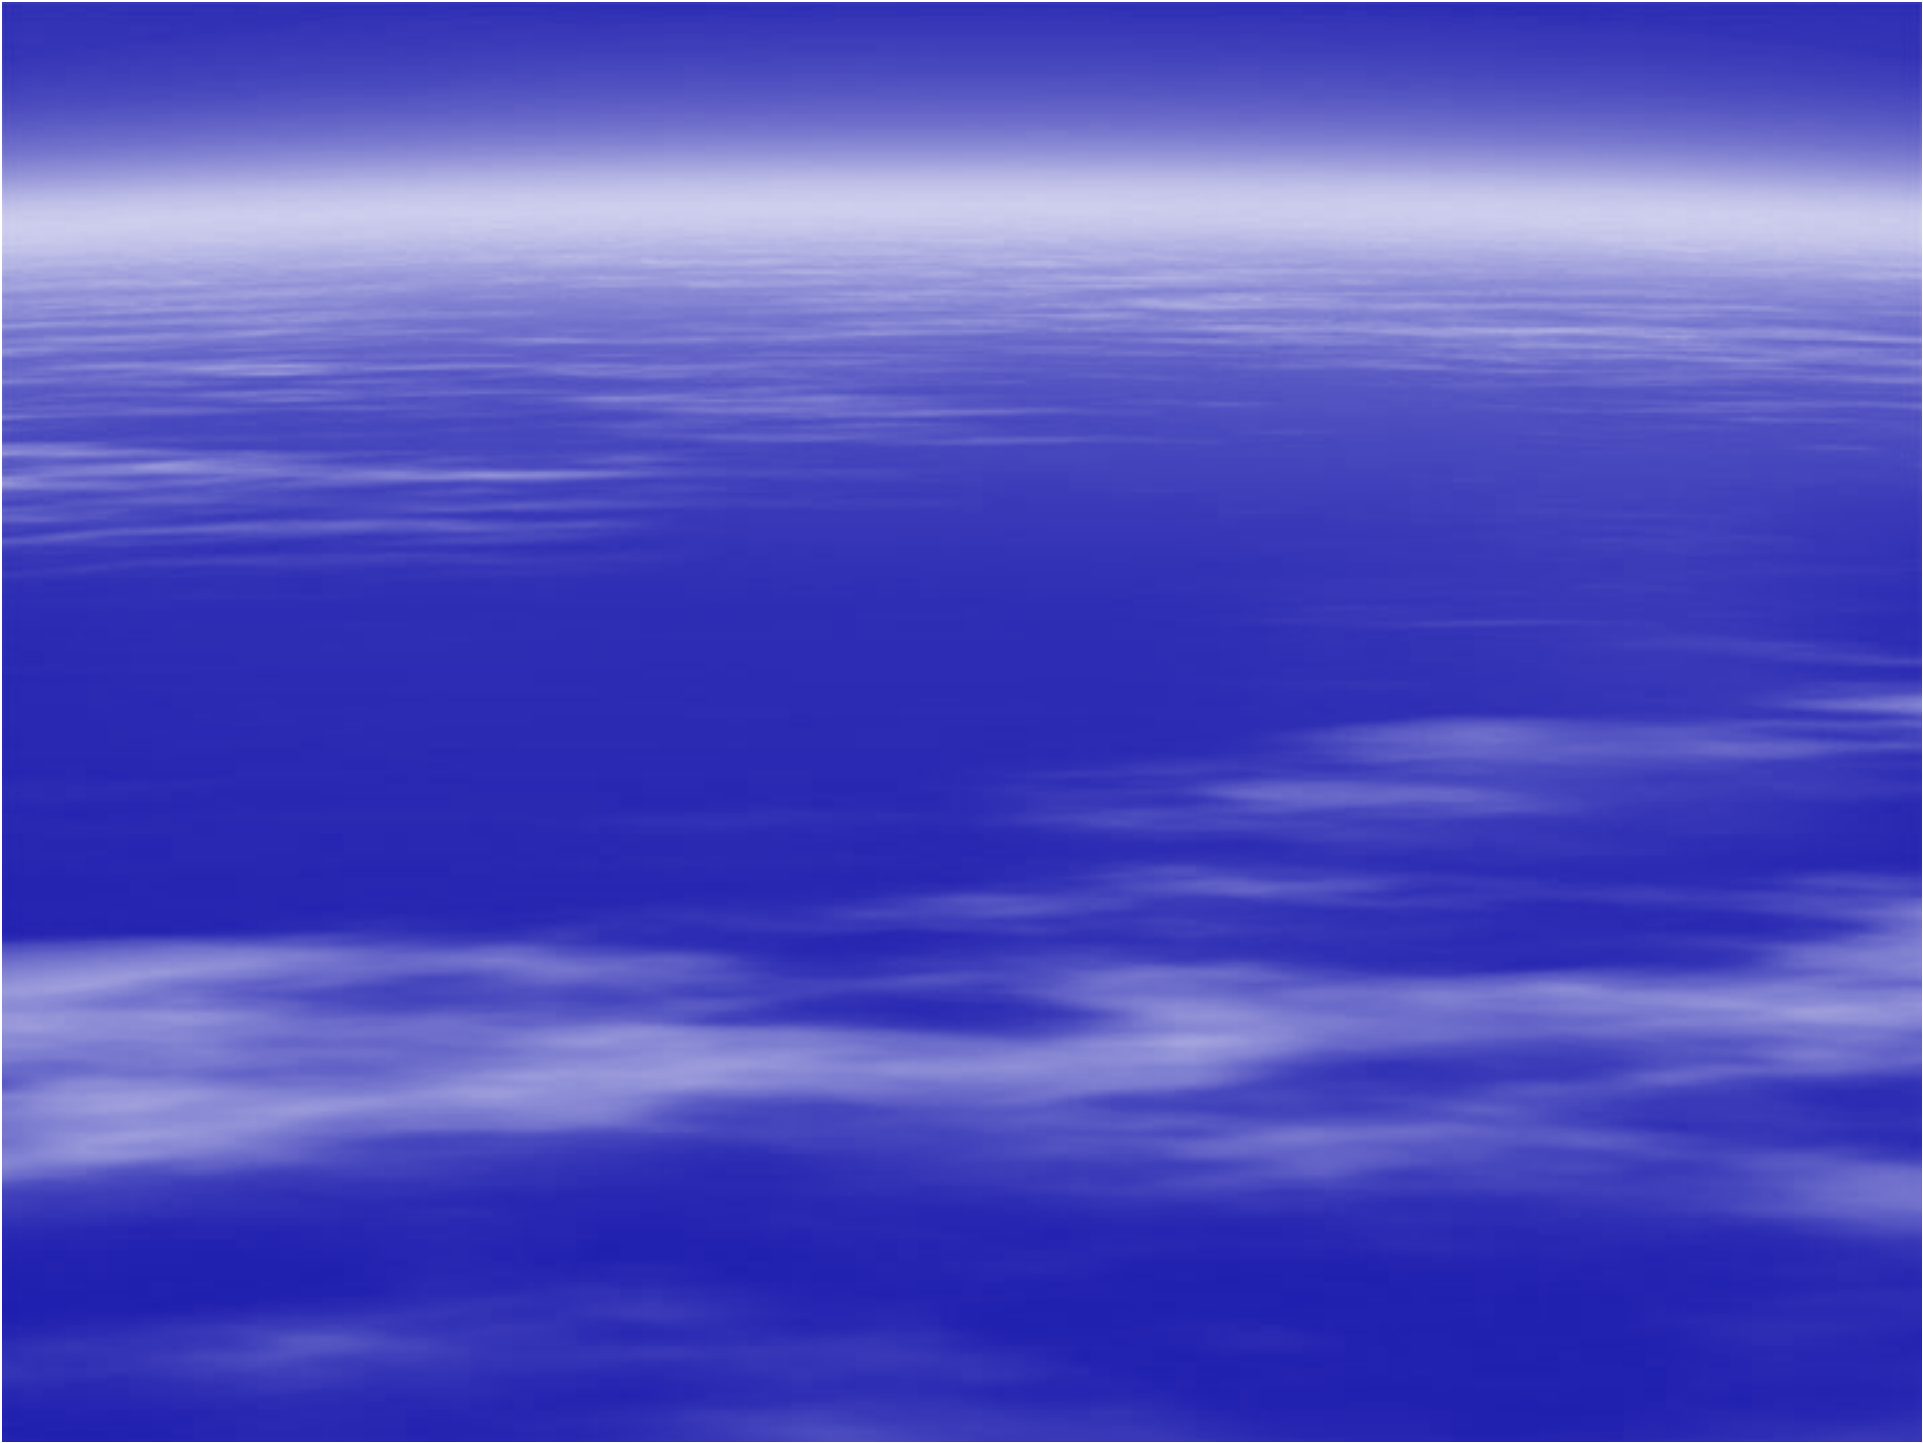

Genotoxicity Tests

- Microbial
eg. Ames Salmonella test
- Mammalian cell
eg. Chinese hamster ovary (CHO)
- *In vivo*
eg. Big Blue transgenic rodent

Genotoxicity Tests

Two Questions

- How consistent is it to hypothesized mechanisms of action for carcinogens?
- How does it compare to animal or human carcinogenicity tests?

Salmonella Tester Strains

- TA 98
- Frameshift mutation in the HisD gene coding for histidinol dehydrogenase
- Target site: series of 8 GCGCGCGC's

Salmonella Tester Strains


- TA 100
- Base-pair mutation in the His G gene coding for His biosynthesis
- Target site: GGG (proline) His dependent

Salmonella/microsome Test

- A feature of the Test:
- Metabolic enzymes can be added to detect activation


Salmonella/microsome Test

- Metabolic enzymes needed for activation of certain compounds – eg. PAHs
- Enzymes from various tissues can be used – e.g. Lung, liver

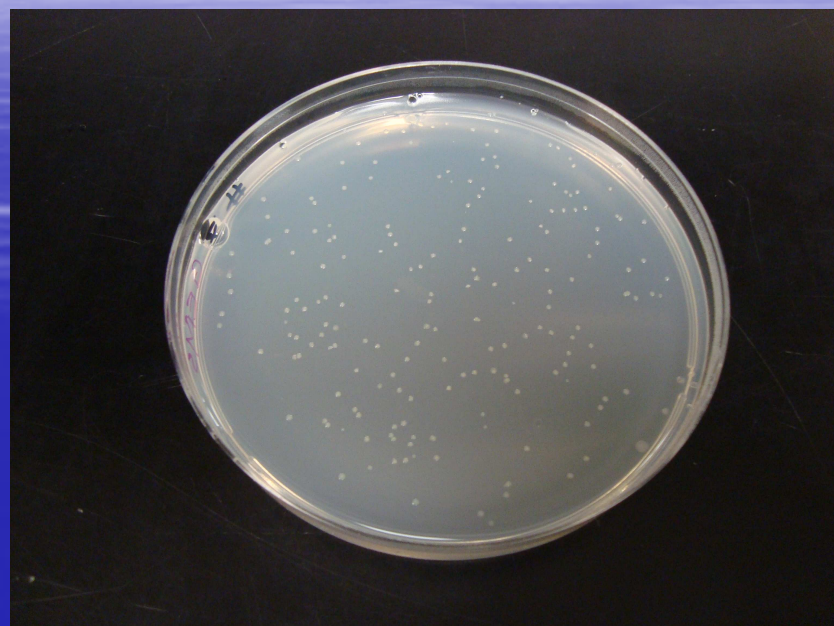

Microsuspension

Dose-Response

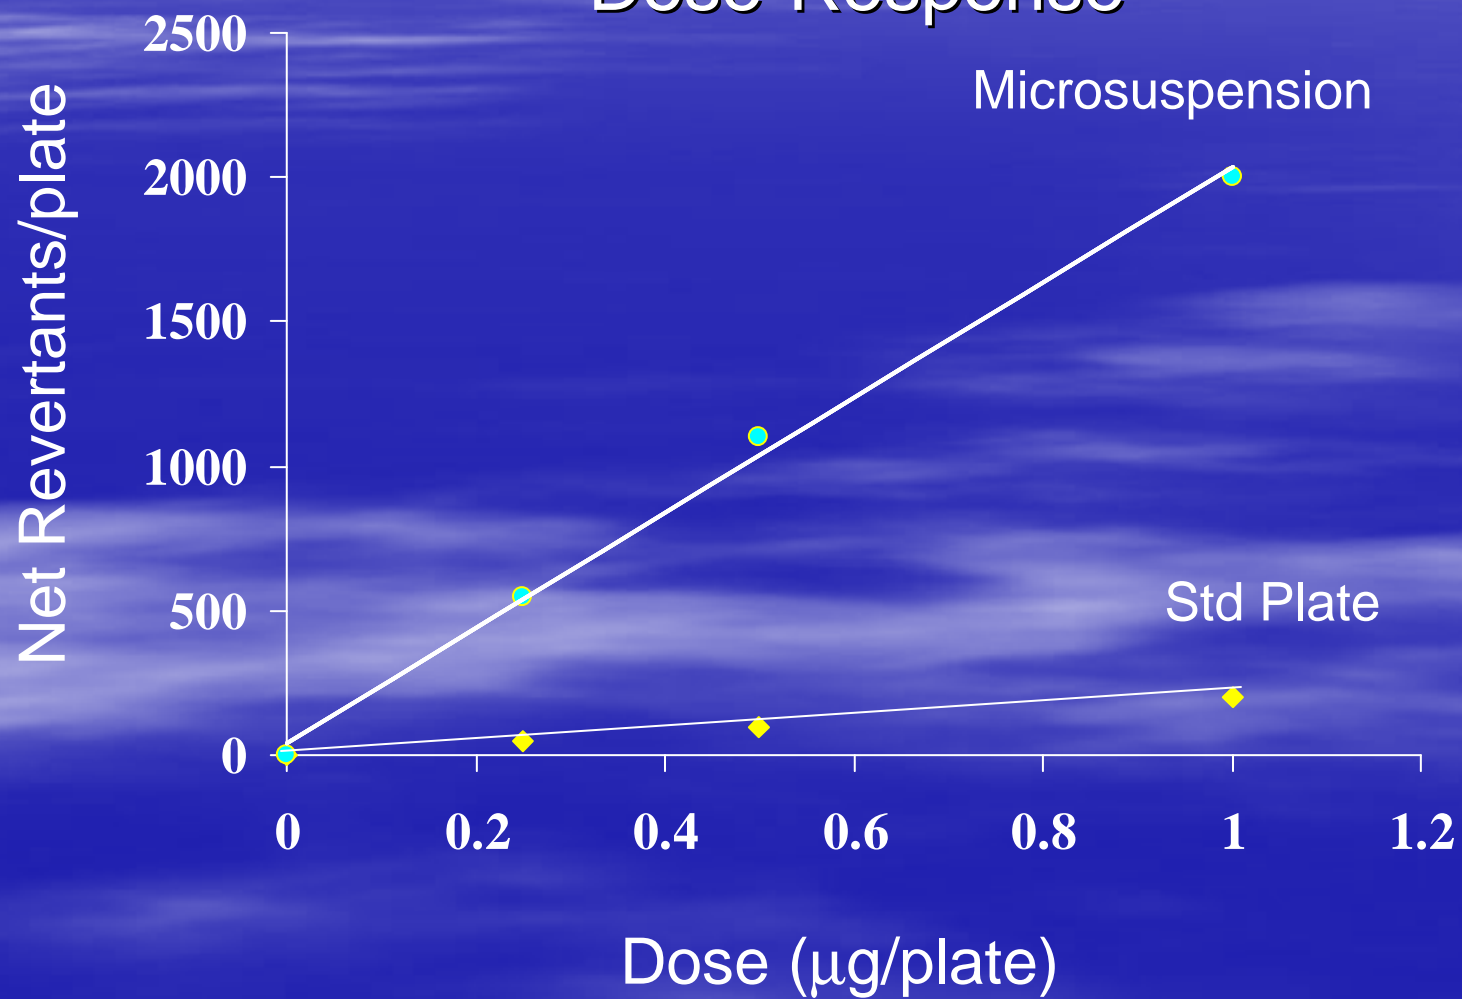

Urine Mutagenicity


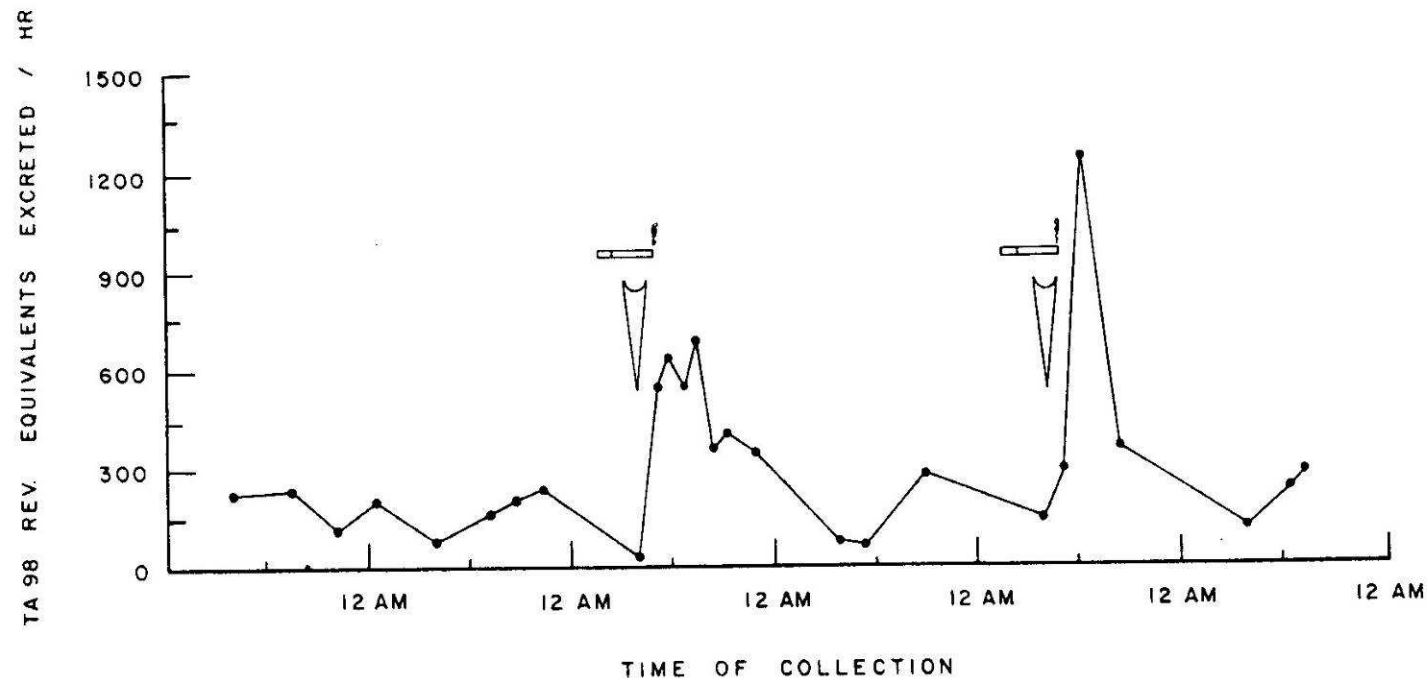



Fig. 1. The kinetics of mutagen excretion in the urine of an occasional smoker (smokes about 1 cigarette per week). A single filter-tipped cigarette (17 mg tar per cigarette) was smoked at the times indicated. TA98 revertant equivalents/h = TA98 revertants per ml urine multiplied by the total volume of urine donated and divided by the number of hours elapsed since providing the last specimen. TA98 revertants per ml of urine was determined from the slope of the linear portion of the dose-response curve for each urine specimen. Water extracted in an identical manner as urine was used as the control.

Mutagen Emissions TA98 (+S9) C15 Vehicle PM

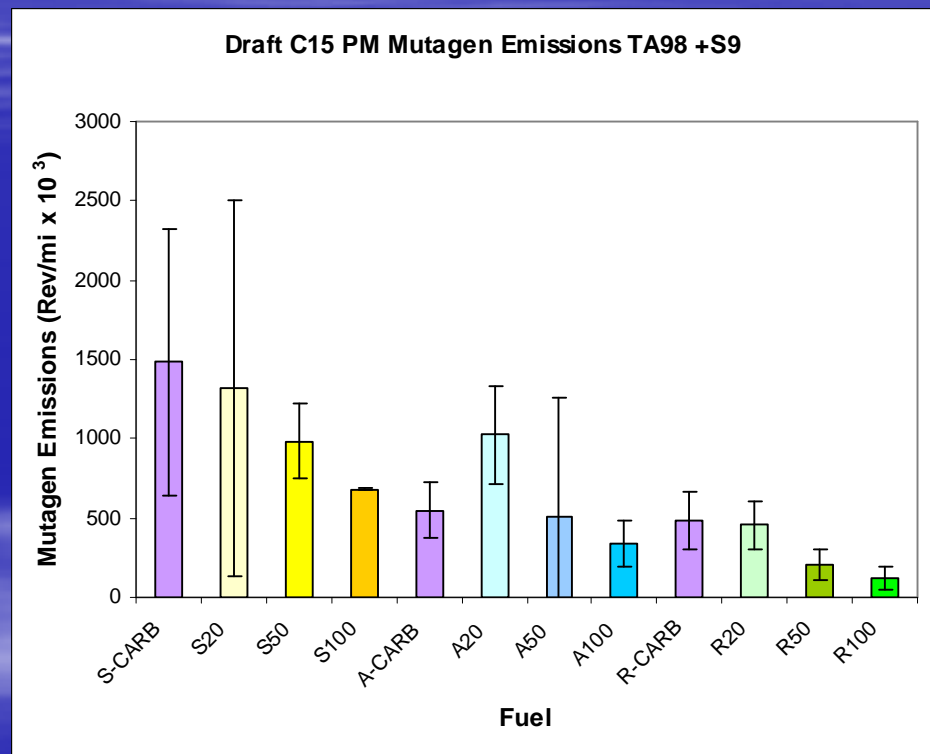


Mutagen Emissions TA98 (-S9)


C15 Vehicle PM

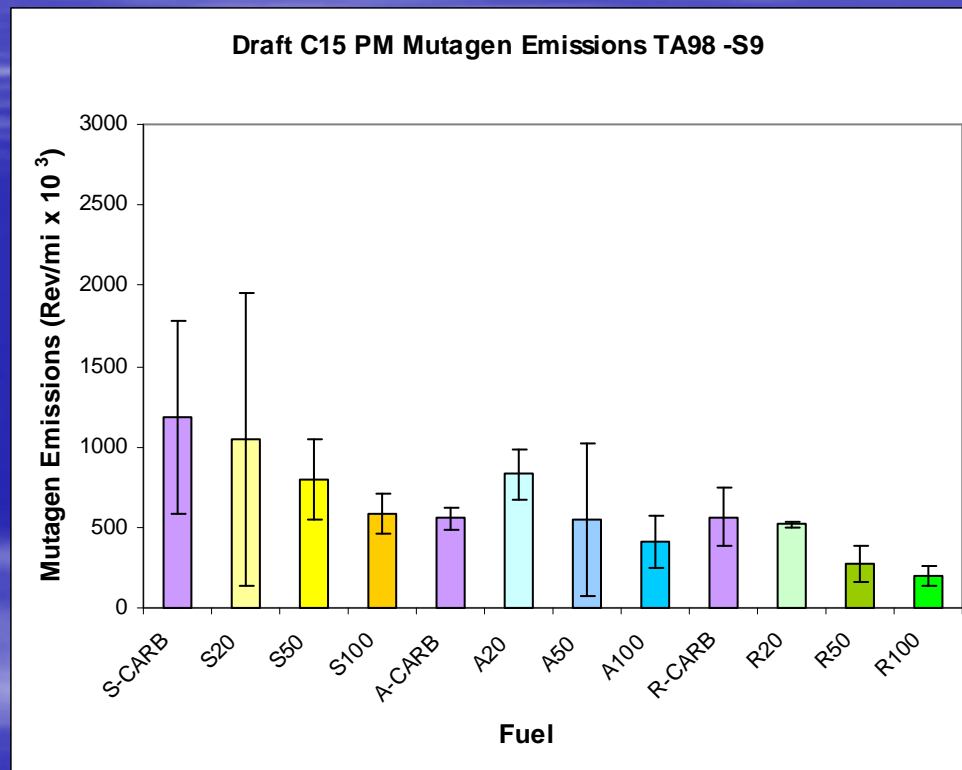

Mutagen Emissions TA98 (+S9) C15 Vehicle VP

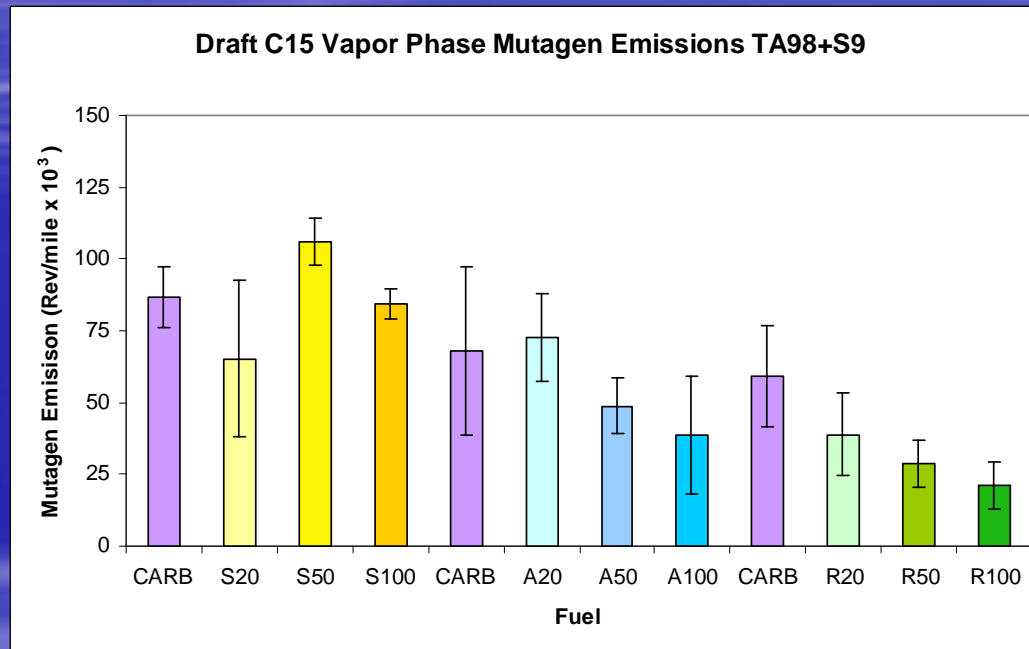


Mutagen Emissions TA100 (+S9) C15 Vehicle VP

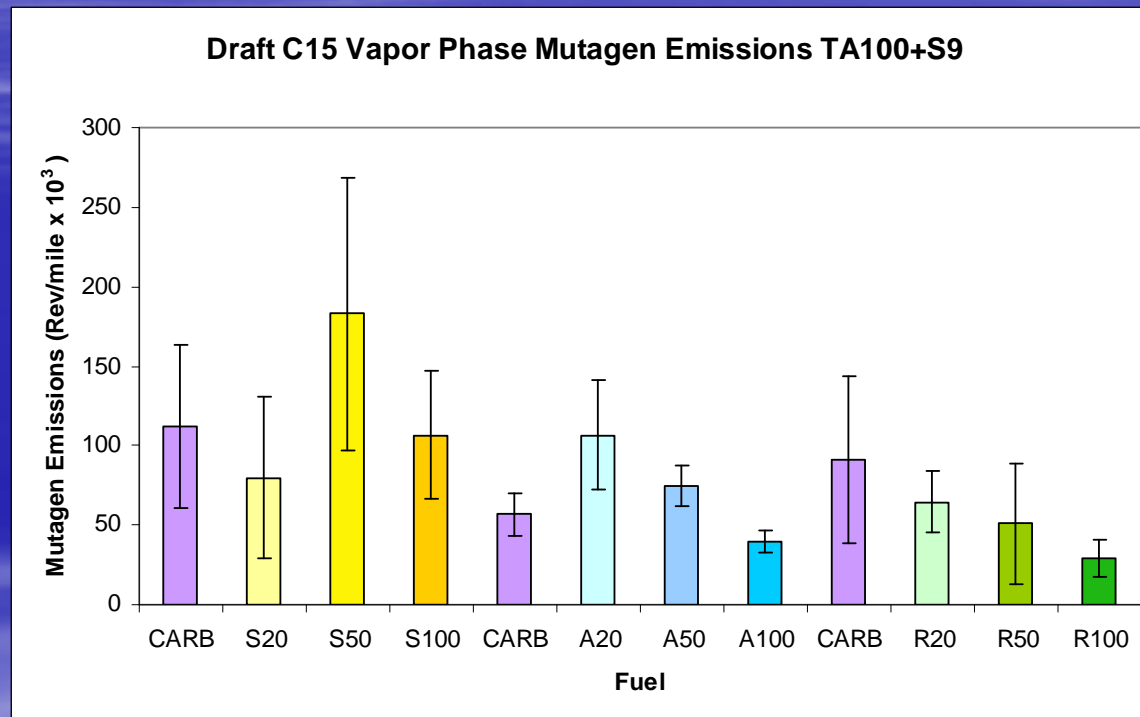


Mutagen Emissions

MBE 4000 Vehicle PM

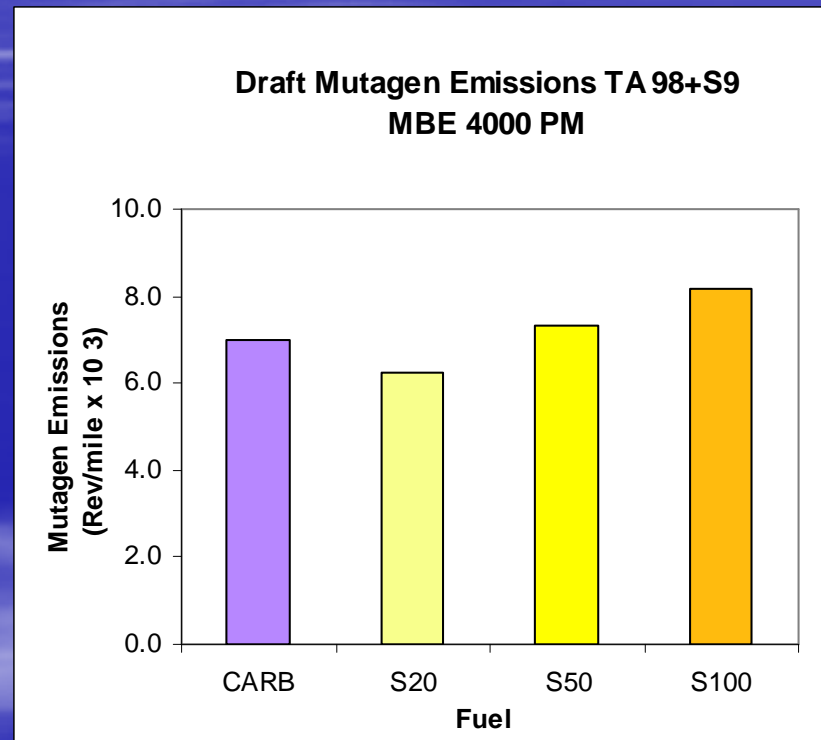


Mutagen Emissions

MBE 4000 Vehicle VP

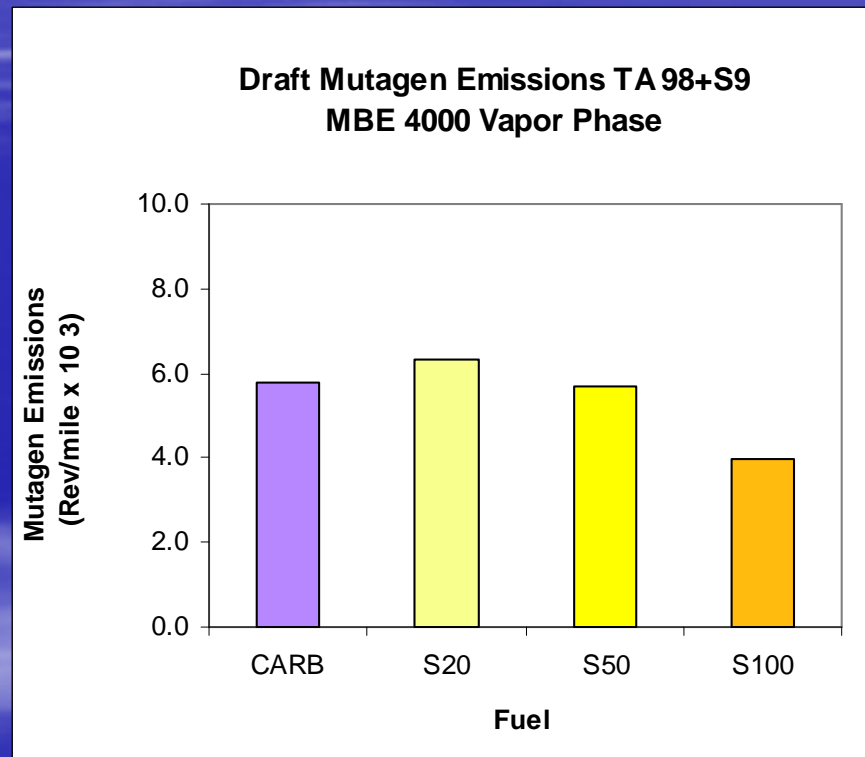

Bus Emissions

Compressed Natural Gas

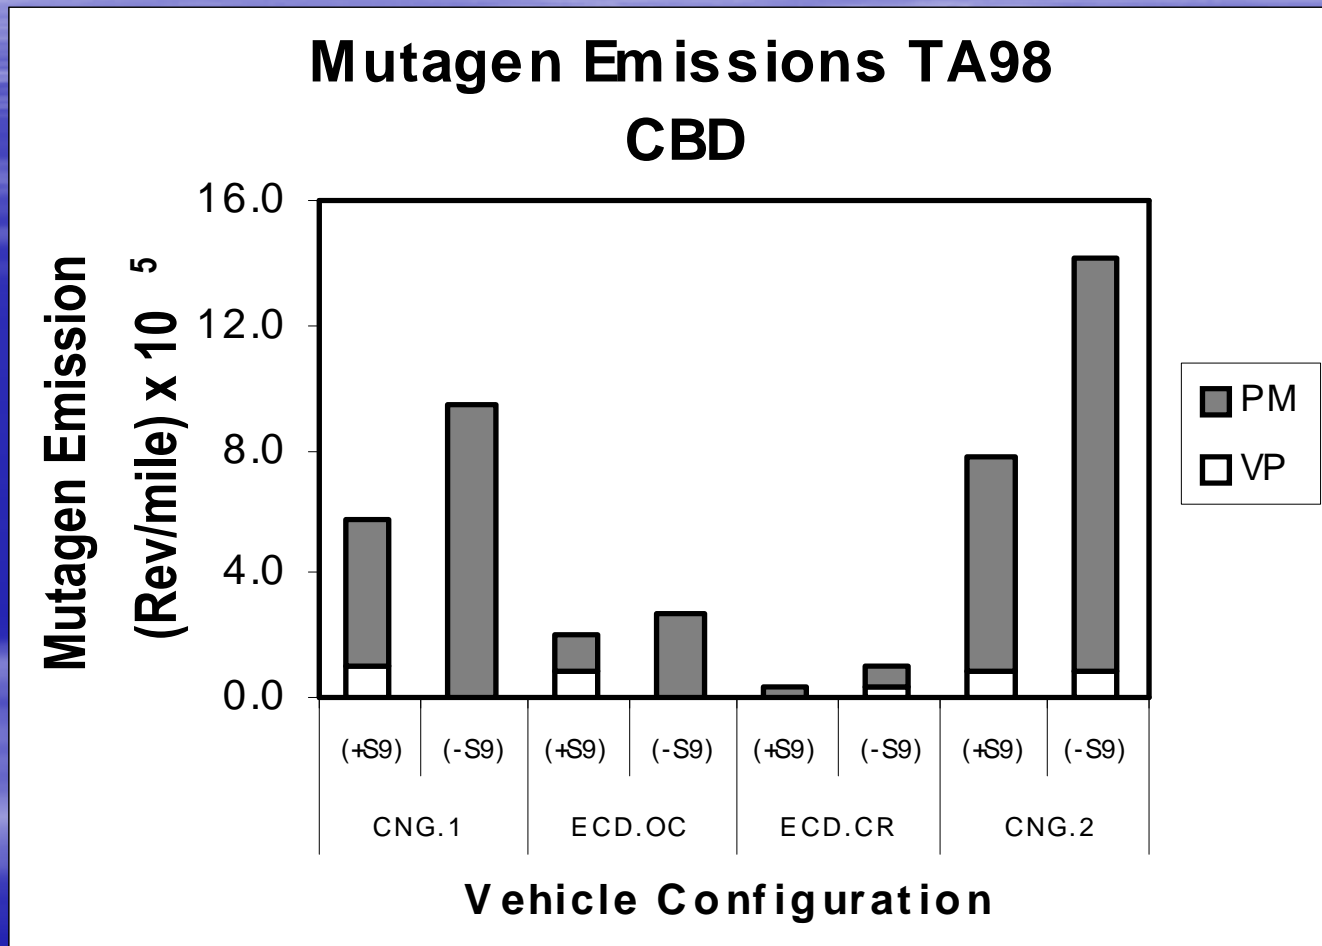

Summary

- For C15 Vehicle: Generally decrease in Mutagen emissions with blend level
- For C15 PM Samples TA98 (+ or – S9) more sensitive than TA100 for all fuels
- Vapor Phase samples lower mutagen emissions than PM TA100 slightly more sensitive
- MBE Mutagen Emissions considerably lower than C15

Summary

- Chemical and Biological tests were overall very consistent with each other regarding emission results for the fuels tested

Acknowledgments

**California Air Resources Board – SSD, MTA/MSOD,
MSCD, MLD, RD**

UCR - CCERT

UCD – Etox

NESTE, SCAQMD, ARB

Acknowledgments

**California Air Resources Board – Bob Okamoto,
Dean Simeroth, Bart Croes, Linda Smith, Alvaro
Alvarado**

CE-CERT – Tom Durbin

**MTA/MSOD Staff – Keshav Sahay, Bill Robertson,
Kwangsam Na, George Gatt, Thomas Ladzinski,
Ralph Rodas**

**MSCD – Don Chernich, Tullie Flower, Wayne
Sobieralski, Roelof Riemersma, Mark Burnitzki**

**UCD – Xiaoxue Liu, Reiko Kobayashi, Uka
Enkhbayar, Rupinder Kaur, Connie Chao, Brian Do,
Christina La**

NESTE, SCAQMD, ARB

