

Biodiesel and Renewable Diesel Emissions Study and Biodiesel Multimedia Evaluation

Real-Time Particulate Matter Emissions

Subhasis Biswas

California Air Resources Board
Mobile Source Control Division/
Heavy Duty In-Use Strategies Branch

1

INSTRUMENTS AND PARAMETERS MEASURED

- 1. Differential Mobility Spectrometer (DMS 500, Cambustion Ltd)**
 - **Size distribution and number concentration** for C15 Caterpillar and MBE 4000 vehicles
 - Classifies particles (4.5 nm-1000nm) according to their electrical mobility
- 2. Engine Exhaust Particle Sizer (EEPS 3090, TSI Inc)**
 - **Size distribution and number concentration** for 2006 Cummins ISM
 - Electrical mobility analyzer (6.04 nm-523nm)
- 3. Electrical Aerosol Detector (EAD 3070A, TSI Inc)**
 - **Particle length/diameter concentration** (the total length of all the particles if placed in a line) for 2006 Cummins ISM and MBE 4000 vehicles
 - Diffusion Charger (10- ~1000nm)
- 4. Photoelectric Aerosol Sensor (PAS 2000, Eco Chem)**
 - **Particle bound polycyclic aromatic hydrocarbons (pPAH)** for 2006 Cummins ISM and MBE 4000 vehicles
 - Photoionization of particle-bound PAH


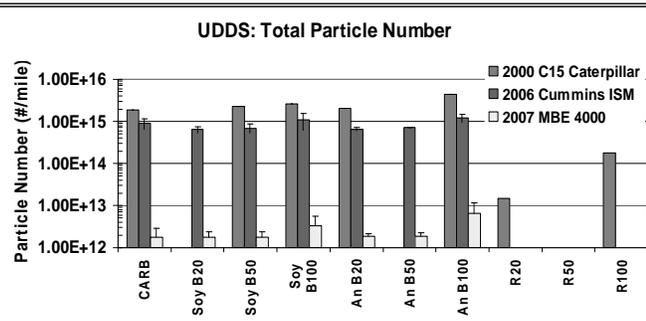


Table 1 Number of driving runs used for data analysis

Fuel	2000 C15 Caterpillar		2006 Cummins ISM						2007 MBE 4000						
	Particle Number/ Size Dist.		Particle Number/ Size Dist.		Particle Length (PL, EAD)		pPAH (PAS)		Particle Number/ Size Dist.		Particle Length (PL, EAD)		pPAH (PAS)		
	Cruise	UDDS	Cruise	UDDS	Cruise	UDDS	Cruise	UDDS	Cruise	UDDS	Cruise	UDDS	Cruise	UDDS	
CARB	2	2	6	6	6	6	6	6	6	6	12	6	12	6	12
Soy B20	NA	NA	3	3	3	3	3	2	3	8	3	8	3	8	
Soy B50	1	1	3	3	3	3	3	3	3	9	3	8	2	8	
Soy B100	1	1	3	3	3	3	3	3	3	7	3	9	3	9	
AnB20	1	2	3	3	3	3	2	3	5	4(2)	4	4(2)	4	3(2)	
An B50	1	NA	3	3	3	3	3	3	4	3	3	3	4	4(1)	
An B100	1	1	3	3	3	3	3	3	4	4(1)	4(1)	4(1)	4	4(1)	
R20	1	1	Renewable fuel was not tested for International and MBE 4000 trucks												
R50	1	NA													
R100	1	1													



*A few single UDDS were run for MBE 4000 while testing Animal based biodiesel. These are denoted by the numbers in brackets [()].Rest of the UDDSs are composites of two single UDDS.


PARTICLE EMISSIONS IN TERMS OF NUMBER

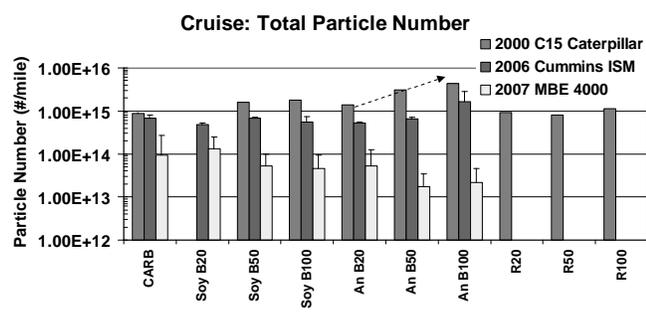

- C15 Caterpillar:
 - PN varied between 1.4×10^{13} - 4.2×10^{15} #/mile
 - An B100 highest particle number (PN) (4.2 - 4.4×10^{15} #/mile)
 - Increase in PN with the progressive enrichment in fuel blends for Animal based biodiesel
- Cummins ISM: Particle number concentration varied between $\sim 4.8 \times 10^{14}$ - 1.65×10^{15} #/mile for cruise and 6.52×10^{14} - 1.19×10^{15} for UDDS cycle.
- MBE 4000:** Higher PN emissions for Cruise cycles (1.76×10^{13} - 1.31×10^{14} #/mile) than UDDS (1.76 - 6.41×10^{12} #/mile)
- **Highest PN for C15 closely followed by Cummins ISM; MBE 4000 reduced PN significantly**

PARTICLE SIZE DISTRIBUTION

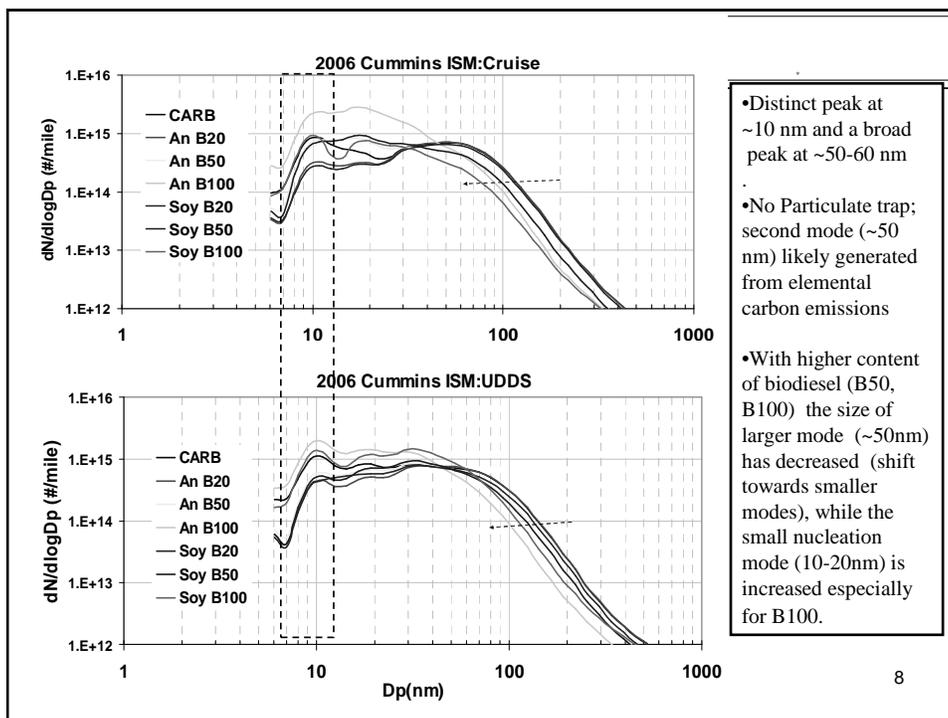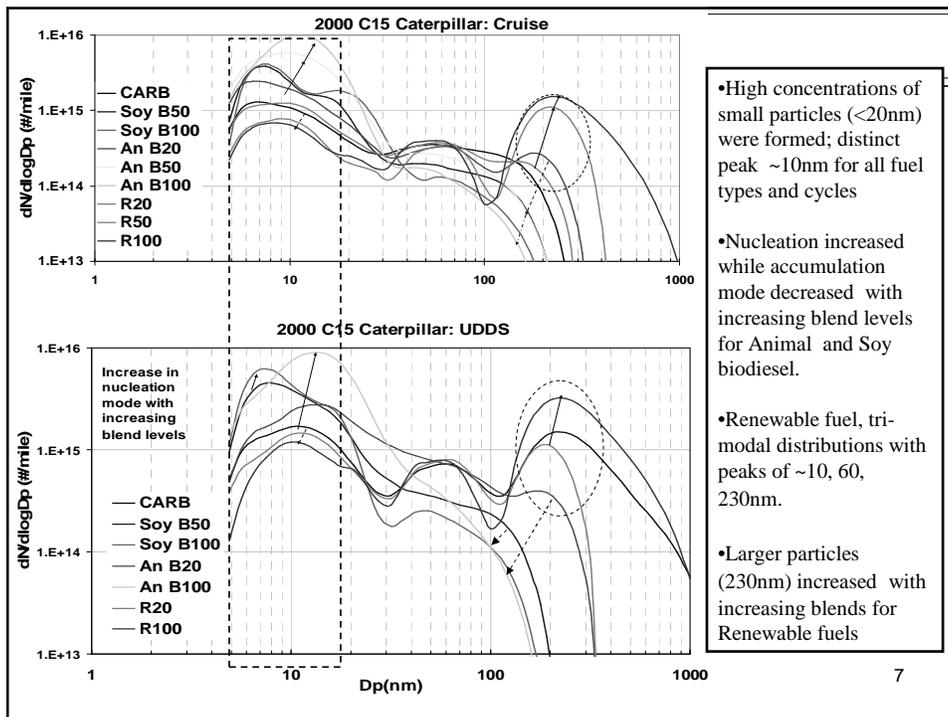


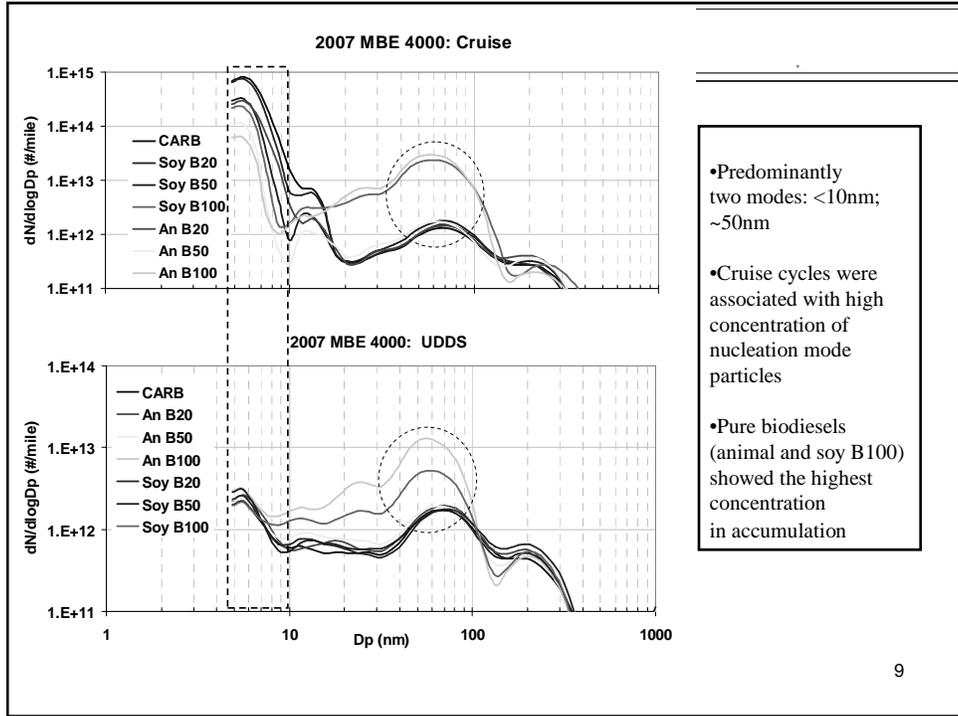



**PARTICLE LENGTH (PL) / DIAMETER
CONCENTRATION**


10

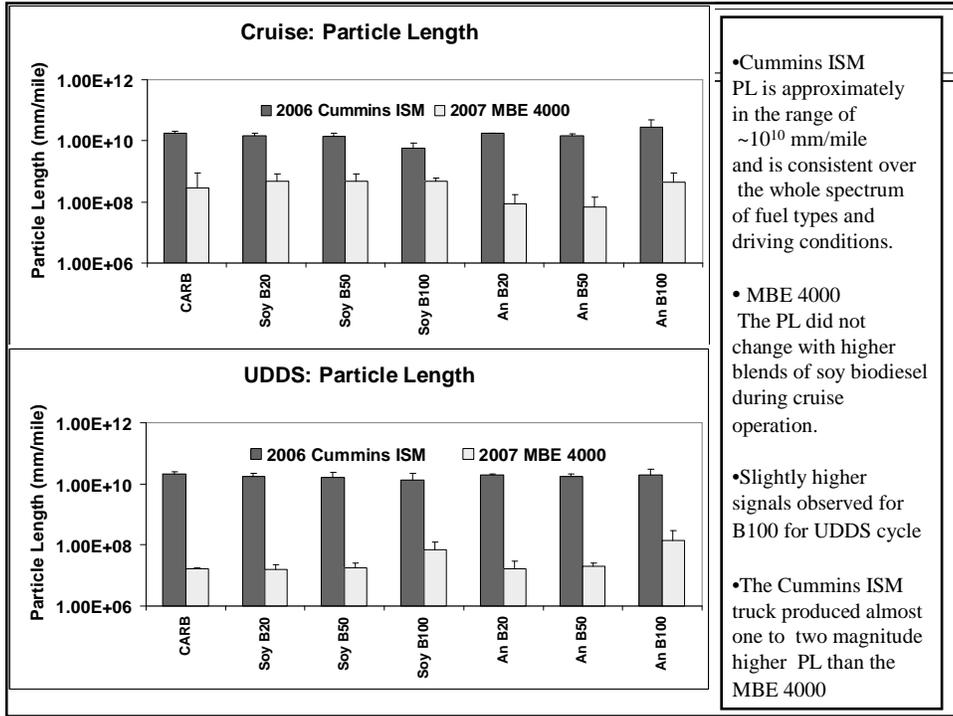

California Environmental Protection Agency
AIR RESOURCES BOARD

PARTICLE SURFACE BOUND PAH

12

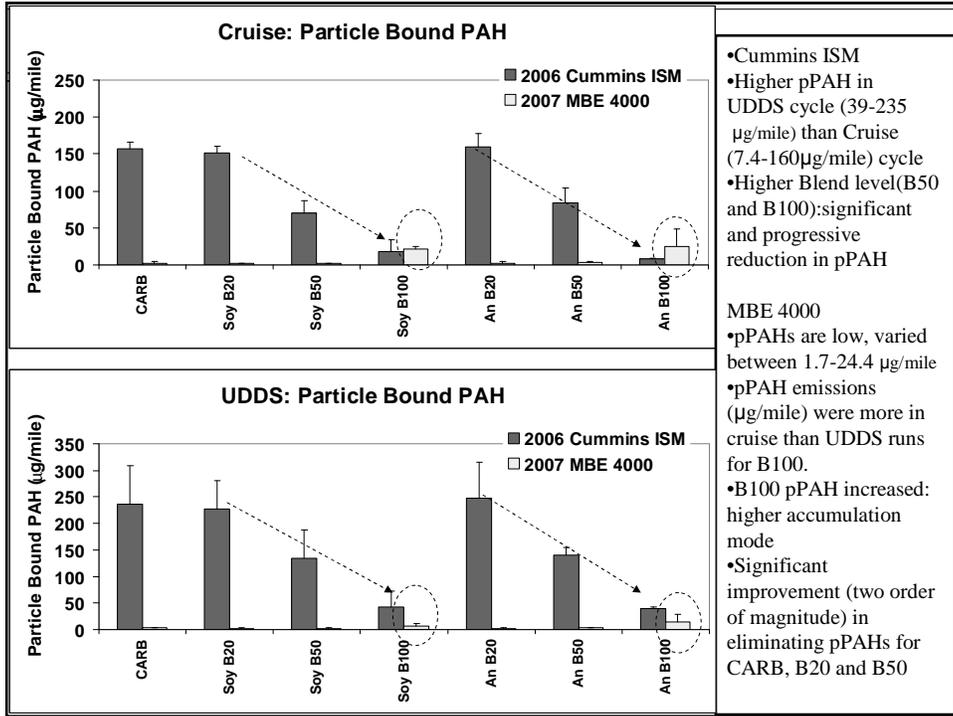

- Cummins ISM
- Higher pPAH in UDDS cycle (39-235 µg/mile) than Cruise (7.4-160µg/mile) cycle
- Higher Blend level(B50 and B100):significant and progressive reduction in pPAH

- MBE 4000
- pPAHs are low, varied between 1.7-24.4 µg/mile
 - pPAH emissions (µg/mile) were more in cruise than UDDS runs for B100.
 - B100 pPAH increased: higher accumulation mode
 - Significant improvement (two order of magnitude) in eliminating pPAHs for CARB, B20 and B50

California Environmental Protection Agency
AIR RESOURCES BOARD

SUMMARY

- Highest Particle number observed for C15 caterpillar closely followed by Cummins ISM
- Equipped with DPF and DOC, MBE 4000 reduced PN significantly compared to C15 Caterpillar and Cummins ISM
- Particle number did not follow the same trends as that of PM mass for different blend levels
- Size distribution showed mono, bi and tri -modal distributions. Significant nucleation observed for C15, Cummins ISM and MBE 4000 cruise
- For C15 and Cummins increase in nucleation was accompanied by decrease in accumulation mode particles for Animal and Soy based bio-diesel
- Higher particle length / diameter concentration observed for Cummins ISM than MBE 4000
- Progressive reduction in pPAH observed for uncontrolled emissions of Cummins ISM with increasing blends of biofuels
- Higher pPAHs correspond to higher accumulation mode particles

14