


**Executive Order G-70-187
Exhibit 2
Figure 5D**

**9800-1
(VACUUM MONITOR PRESSURE SWITCH)**

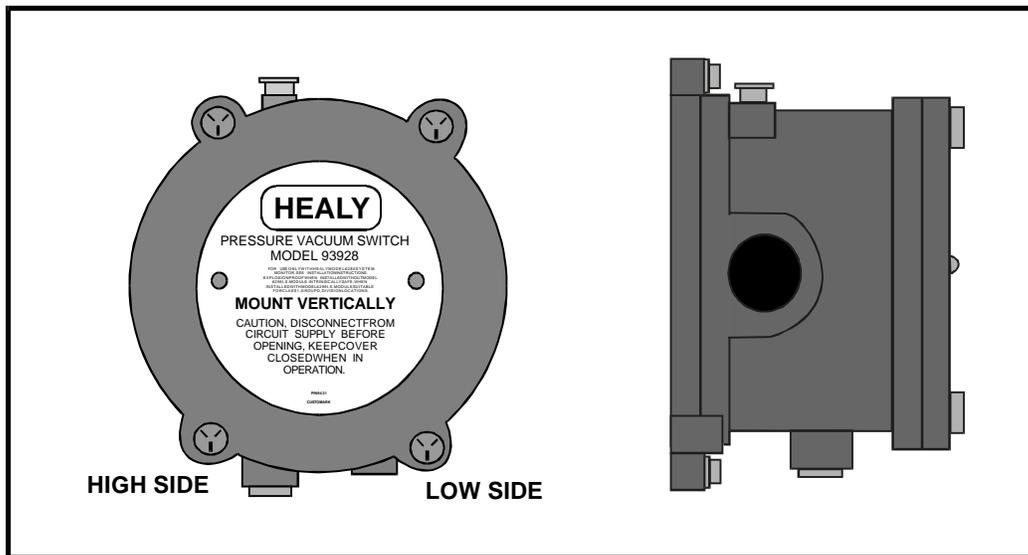

9800-1 Vacuum Monitor Pressure Switch. The 9800-1 Vacuum Switch is mounted on the Phase II Vapor Return line from the gasoline dispensers near or on the vacuum source. Two wires (16 or 18 AWG) from the **SMCB** exit the building through a sealed conduit (per NEC). These wires must be 600 volt rated, Class 1 type insulation. They connect to the switch terminals common (COM.) and normally open (NO) inside the 9800-1 Vacuum Switch. See Healy Systems wiring diagram 9200-6308 (REV 4) sheets 1 and 2 for general layout and installation requirements.